

Pin Clamp Cylinder C(L)KQG /C(L)KQP Series Ø50

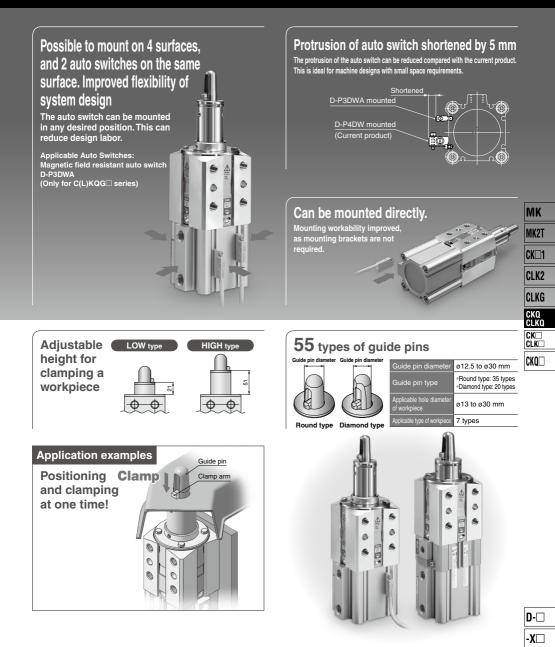

497


Pin Clamp Cylinder C(L)KQG□/C(L)KQP□ Series

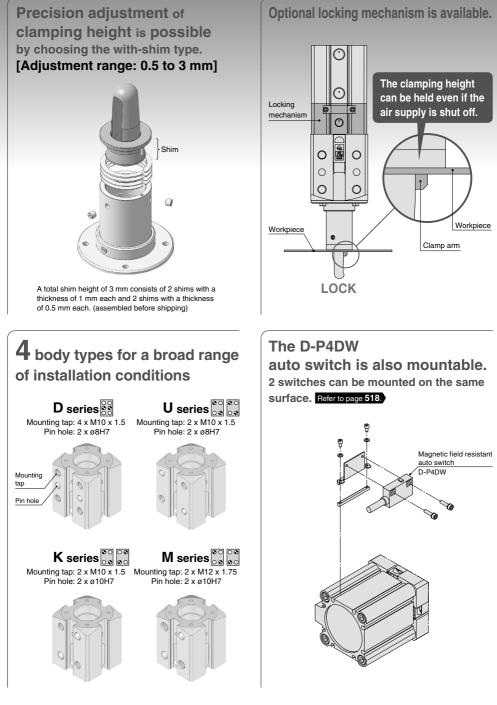

SMC

Pin Clamp Cylinder Mounting Variations

C(L)KQG /C(L)KQP Series

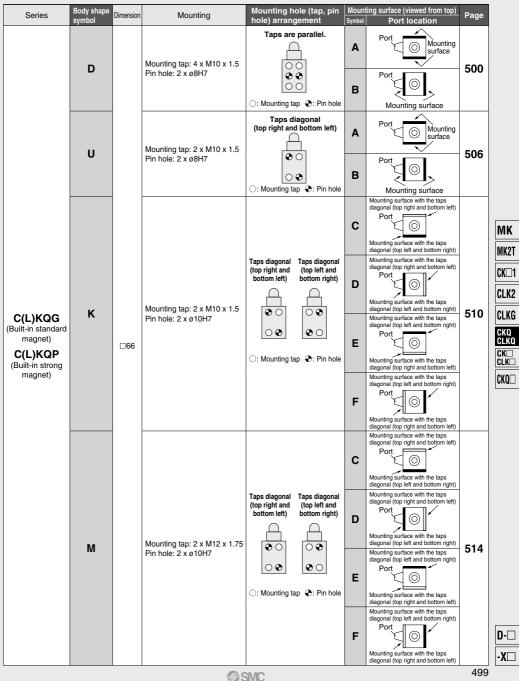

Pin Clamp Cylinder Diseries 😥

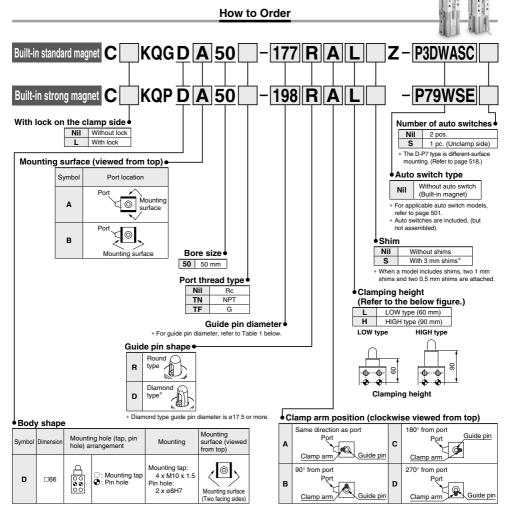


Table 1. Guide Pin Diameter

Symbol	125	127	128	129	130	145	147	148	149	150	155	157	158	159	160					
Guide pin diameter	12.5	12.7	12.8	12.9	13.0	14.5	14.7	14.8	14.9	15.0	15.5	15.7	15.8	15.9	16.0					
Applicable hole diameter of workpiece		F	For ø13	3			1	For ø1	5				For ø16	3						
Guide pin shape		Round type																		
										000										
Symbol	175	177	178	179	180	195	197	198	199	200	245	247	248	249	250	295	297	298	299	300
Guide pin diameter	17.5	17.7	17.8	17.9	18.0	19.5	19.7	19.8	19.9	20.0	24.5	24.7	24.8	24.9	25.0	29.5	29.7	29.8	29.9	30.0
Applicable hole diameter of workpiece		F	or ø18	3			1	For ø20)				or ø2	5				For ø30)	
Guide pin shape		Round type, Diamond type																		
500																				

SMC

Pin Clamp Cylinder CKQ^G D/CLKQ^G D Series

Applicable cylinder series	Туре	Auto switch model	Applicable magnetic field	Electrical entry	Indicator light	Wiring (Pin no in use)	Load voltage	Lead wire length	Applicable load
		D-P3DWASC D-P3DWASE		Pre-wired connector		2-wire (3-4) 2-wire (1-4)	24 VDC	0.3 m	
	Solid state	D-P3DWA D-P3DWAL	AC magnetic field (Single-phase	Grommet	2-color	2-wire		0.5 m 3 m	
	auto switch	D-P3DWAZ D-P4DWSC D-P4DWSE	AC welding magnetic field)	Pre-wired connector	indicator	2-wire (3-4) 2-wire (1-4)		5 m 0.3 m	Relay, PLC
		D-P4DWL D-P4DWZ		Grommet		2-wire		3 m 5 m	
C(L)KQP series	Reed auto switch	D-P79WSE	DC/AC	Pre-wired connector	2-color indicator	2-wire (1-4)	24 VDC	0.3 m	
		D-P74L D-P74Z	magnetic field	Grommet	1-color indicator	2-wire	24 VDC 100 VAC	3 m 5 m	

Table 2. Applicable Auto Switches/Refer to pages 941 to 1067 for further information on auto switches.

Refer to pages 518 and 519 for cylinders with auto sw	vitches.
---	----------

- Auto switch proper mounting position, mounting height and operating distance
- · Operating range
- · Auto switch mounting

Basic Specifications

Action			Double acting				
Bore size			50 mm				
Fluid			Air				
Minimum oper	ating pre	essure	CKQ□: CLKQ□ (With lock) 0.1 MPa 0.15 MPa*				
Maximum	Guide pin	ø12.5 to ø13.0	0.7 MPa				
operating pressure	diameter	ø14.5 to ø30.0	1.0 MPa				
Proof	Guide pin	ø12.5 to ø13.0	1.0 MPa				
pressure	diameter	ø14.5 to ø30.0	1.5 MPa				
Ambient and f	luid temp	perature	-10 to 60°C (No freezing)				
Cushion				None			
Lubrication			Non-lube				
Piston speed (Clamp speed)			50 to 150 mm/sec				
Port size (Cyli	nder por	t)	1/4 (Rc, NPT, G)				

* Minimum operating pressure is 0.2 MPa when cylinder part and locking part use the same piping.

Lock Specifications

Locking action	Spring locking (Exhaust locking)
Unlocking pressure	0.2 MPa or more
Lock starting pressure	0.05 MPa or less
Locking direction	Lock at extended direction (Clamp holding)
Port size (Lock release port)	1/8 (Rc, NPT, G)
Holding force (Maximum static load)	982 N

Clamping Force

										[N]		
Model	Guide pin		Operating pressure [MPa]									
wouer	diameter	0.2	0.3	0.4	0.5	0.6	0.7	0.8	0.9	1.0		
C(L)KQ ^G	ø12.5 to ø13.0	164.9	329.8	494.7	659.6	824.5	989.4	-	—	Ι		
	ø14.5 to ø30.0	164.9	329.8	494.7	659.6	824.5	989.4	Note 1) 1154.3	Note 1) 1319.2			

Note 1) Lock holding force of the CLKQ□ is 982 N. Design the circuit such that the lock holding force is taken into consideration when the operating pressure exceeds 0.75 MPa.

The operating pressure should be not greater than the lock holding force as it may cause wearing out and/or damage of the locking part and shorten lock life and may lead to possible failure if applied with a load larger than the lock holding force.

Note 2) It takes approximately 0.3 seconds for the cylinder to operate to generate clamping force from an unclamping state (when no speed controller is installed). Design circuit taking into consideration the time before the clamping force is generated.

Note 3) Determine the clamping force according to the strength of the workpiece. It can be damaged if the clamping force is too large.

Weight

				[kg]				
Model		C(L)KQ ⁶ D						
Guide pin diameter	Witho	ut lock	With lock					
[mm]	LOW	HIGH	LOW	HIGH				
ø12.5 to ø13.0	1.62	1.79	2.14	2.3				
ø14.5 to ø15.0	1.62	1.79	2.14	2.3				
ø15.5 to ø16.0	1.63	1.79	2.14	2.31				
ø17.5 to ø18.0	1.67	1.84	2.18	2.36				
ø19.5 to ø20.0	1.68	1.85	2.19	2.37				
ø24.5 to ø25.0	1.74	1.94	2.25	2.46				
ø29.5 to ø30.0	1.78	1.98	2.29	2.5				

MK

MK2T CK=1

CLK2

CLKG

D-□ -X□

SMC

CKQ^GD/CLKQ^GD Series

Replacement Parts

Seal Kit (For type without lock only)

1234	no.		Contents/Quantity	
- NI	no.	Rod seal	Piston seal	Tube gasket
CQ2B	50-PS	1	1	1

Storage of Seals (for long term storage)


- 1) Enclose seals by packaging and store.
- 2) Avoid locations exposed to direct sunlight and high temperature and humidity. In particular, isolate from equipment that can generate heat, radiation and ozone.
- 3) Do not stack a lot of seals, and deform or damage it by putting a heavy object on it.
- 4) White particles can emerge from the surface of seals during storage, but they do not affect its performance.

Grease Pack

Use a grease pack when adding grease during the replacement of the seals or maintenance of the cylinder.

Kit no.	Grease weight
GR-S-010	10 g

 Guide Pin Order No.



• Shirr	1
Nil	Without shims
S	With shims*
	ide pin comes with 1 I pin for positioning.

■Clamp Arm Order No.

CKQG-13 A	
Applicable hole diameter of workpiece	
 Refer to Table 1 (Symbol 1) below. 	

Clamp arm

* The clamp arm includes a split pin.

Guide pin diameter


* Refer to Table 1 (Symbol 2) below.


Table 1. Guide pin

R

Symbol 1	Applicable hole diameter of workpiece	Symbol 2	Guide pin diameter	Shape	Symbol 1	Applicable hole diameter of workpiece	Symbol 2	Guide pin diameter	Shape
		125	12.5				175	17.5	
		127	12.7	1			177	17.7	1
13	13 128 12.8	1	18	18	178	17.8			
		129	12.9]			179	17.9]
		130	13.0]			180	18.0]
		145	14.5]			195	19.5]
		147 14.7			197	19.7			
15	15	148	14.8	Round type	e 20	20	198	19.8	
		149	14.9]			199	19.9]
		150	15.0	1			200	20.0	Round type Diamond type
		155	15.5]			245	24.5	
		157	15.7				247	24.7	
16	16	158	15.8]	25	25	248	24.8	
		159	15.9]			249	24.9	
		160	16.0				250	25.0	
							295	29.5]
							297	29.7	
					30	30	298	29.8	
							299	29.9]
							300	30.0	

 A 502



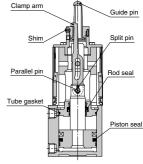

CKQDD50 (With shims)

Pin Clamp Cylinder CKQ^G D/CLKQ^G D Series

G

5 mm x 2

ന്


(t = 1


Dimensions




* Refer to "How to Order" on page 500 for positional relationship of the mounting surface and port.

* The figures below indicate the CKQGDA50-DRAHZ.

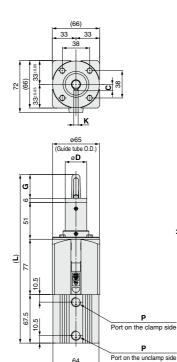

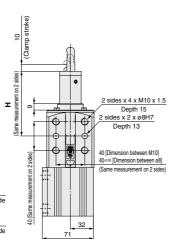

Hole diameter

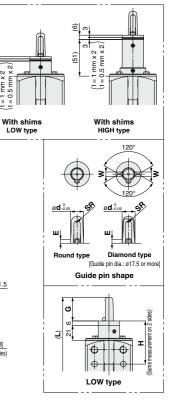



Hole diameter						l F	1		I	_						
oameter of workpiece	C	øD	ød	E	G	LOW type	HIGH type	ĸ	LOW type	HIGH type	SR	w	øΖ			
			ø12.5	= 10		Without	Without	ut								
			ø12.7	= 9]	shims 60±0.05	shims 90±0.05									
ø 13	9	ø30	ø12.8	= 8	33	With	With	6	204.5	234.5	4	— ø36				
			ø12.9	= 8		shims	shims									
			ø13.0	= 7		60	90									
			ø14.5	= 9		Without	Without									
			ø14.7	= 8	1	shims	shims 90±0.05				5					
ø 15	11	ø30	ø14.8	= 8	34	60±0.05 With	With	7	205.5	235.5		-	ø36			
			ø14.9	= 7		shims	shims									
			ø15.0	= 7	1	60	90									
			ø15.5	= 10		Without	Without									
			ø15.7	= 9	1	shims	shims									
ø16	11	ø30	ø15.8	= 8	34	60±0.05 With	90±0.05 With	7	205.5	235.5	5.5 —	ø36				
			ø15.9	= 8	1	shims	shims									
			ø16.0	= 7	1	60	90									

HOIE						H L		- 1					
dameter of	C	øD	ød	Е	G	LOW	HIGH	ĸ		HIGH	SR	w	øΖ
workpiece						type	type		type	type			
			ø17.5	= 10		Without	Without						
			ø17.7	= 9		shims 60±0.05	shims 90±0.05						
ø18 12	ø35	ø17.8	= 8	37	With	With	7	208.5	238.5	6	6	ø40	
			ø17.9	= 8		shims	shims						
			ø18.0	= 7		60	90						
			ø19.5	= 10		Without	Without						
			ø19.7	= 9		shims 60±0.05	shims 90±0.05						
ø 20	13	ø35	ø19.8	= 8	39	With	With shims	8	210.5	240.5	7	7	ø40
			ø19.9	= 8		shims							
			ø20.0	= 7		60	90						
			ø24.5	= 10		Without	Without						
			ø24.7	= 9]		shims shims 60±0.05 90±0.05						
ø 25	16	ø40	ø24.8	= 8	39	With	With	8	210.5	240.5	9.5	7	ø47
			ø24.9	= 8		shims	shims						
			ø25.0	= 7		60	90						
			ø29.5	= 10		Without	Without						
			ø29.7	= 9		shims 60±0.05	shims 90±0.05						
ø 30	18	ø40	ø29.8	= 8	39	With	With	8	210.5	240.5	11	9	ø47
			ø29.9	= 8		shims	shims						
			ø30.0	= 7		60	90						

н

	Р	
Nil	TN	TF
Rc1/4	NPT1/4	G1/4

SMC

503

D-🗆 -X□

 
CKQ^G_PD/CLKQ^G_PD Series


Dimensions


CLKQ^gDA50



* The figures below indicate the CLKQGDA50-□RAHZ.



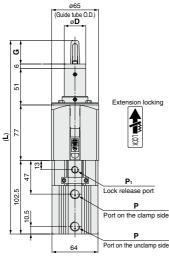

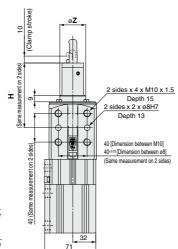


Hole

øD

ød Е

С

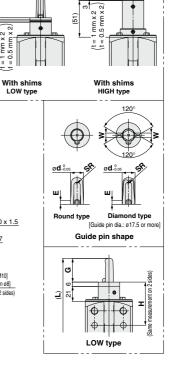

øΖ

SR w

HIGH

9

ŝ

× 2 e o 21

LOW type

mm x 2 = 0.5 mm

1

÷

Hole diameter						ŀ	4			L				
of workpiece	c	øD	ød	E	G	LOW type	HIGH type	ĸ	LOW type	HIGH type	SR	w	øΖ	
			ø12.5	= 10		Without	Without							
			ø12.7	= 9]	shims shims 60±0.05 90±0.05								
ø 13	9	ø30	ø12.8	= 8	33	With	With	6	239.5	269.5	4	-	ø36	
			ø12.9	= 8]	shims	shims							
			ø13.0	= 7		60	90							
			ø14.5	= 9		Without	Without							
			ø14.7	= 8		shims 60±0.05	shims 90±0.05							
ø15	11	ø30	ø14.8	= 8	34			With	With	7	240.5	270.5	5	_
			ø14.9	= 7	1	shims	shims							
			ø15.0	= 7		60	90							
			ø15.5	= 10		Without	Without							
			ø15.7	= 9	1	shims 60±0.05	shims 90±0.05							
ø16	11	ø30	ø15.8	= 8	34	With	With	7	240.5	270.5	5.5	_	ø36	
			ø15.9	= 8]	shims	shims							
			ø16.0	= 7	1	60	90							

P.

ø18	12	ø35	Ø17.5 Ø17.7 Ø17.8 Ø17.9 Ø18.0	= 10 = 9 = 8 = 8 = 7	37	Without shims 60 ^{±0.05} With shims 60	Without shims 90±0.05 With shims 90	7	243.5	273.5	6	6	ø40
ø 20	13	ø35	Ø19.5 Ø19.7 Ø19.8 Ø19.9 Ø20.0	= 10 = 9 = 8 = 8 = 7	39	Without shims 60 ^{±0.05} With shims 60	Without shims 90 ^{±0.05} With shims 90	8	245.5	275.5	7	7	ø40
ø 2 5	16	ø40	024.5 024.7 024.8 024.9 025.0	= 10 = 9 = 8 = 8 = 7	39	Without shims 60±0.05 With shims 60	Without shims 90±0.05 With shims 90	8	245.5	275.5	9.5	7	ø47
ø 30	18	ø40	Ø29.5 Ø29.7 Ø29.8 Ø29.9 Ø30.0	= 10 = 9 = 8 = 8 = 7	39	Without shims 60±0.05 With shims 60	Without shims 90±0.05 With shims 90	8	245.5	275.5	11	9	ø47

н

LOW HIGH

type type K LOW

type type

G


Nil ΤN TF Nil ΤN TF Rc1/4 NPT1/4 G1/4 Rc1/8 NPT1/8 G1/8 504

P

SMC

Pin Clamp Cylinder Useries Constant Con

How to Order

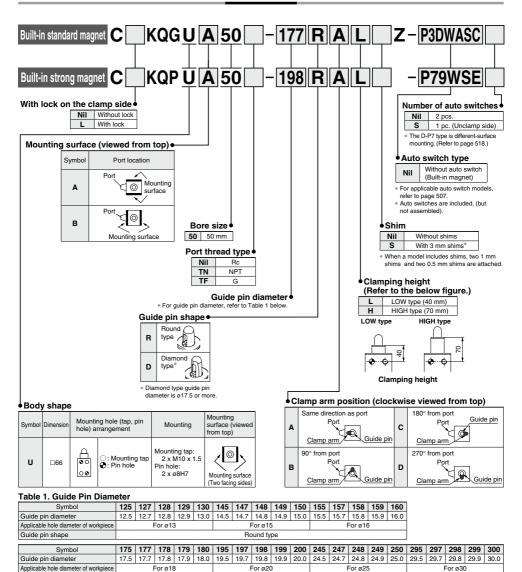

Round type, Diamond type

Courtesy of Steven Engineering, Inc - (800) 258-9200 - sales@steveneng.com - www.stevenengineering.com

506

Guide pin shape

Pin Clamp Cylinder CKQ^G U/CLKQ^G U Series

Applicable cylinder series	Туре	Auto switch model	Applicable magnetic field	Electrical entry	Indicator light	Wiring (Pin no in use)	Load voltage	Lead wire length	Applicable load
		D-P3DWASC D-P3DWASE		Pre-wired connector		2-wire (3-4) 2-wire (1-4)		0.3 m	
C(L)KQG series	Solid state	D-P3DWA D-P3DWAL D-P3DWAZ	AC magnetic field (Single-phase AC welding magnetic field)	Grommet	2-color	2-wire	24 VDC	0.5 m 3 m 5 m	
0(_)	auto switch	D-P4DWSC D-P4DWSE		Pre-wired connector	indicator	2-wire (3-4) 2-wire (1-4)	211000	0.3 m	Relay, PLC
		D-P4DWL D-P4DWZ		Grommet		2-wire		3 m 5 m	
C(L)KQP series	Reed	D-P79WSE	DC/AC	Pre-wired connector	2-color indicator	2-wire (1-4)	24 VDC	0.3 m	
OLINGE Selles	auto switch	D-P74L D-P74Z	magnetic field	Grommet	1-color indicator	2-wire	24 VDC 100 VAC	3 m 5 m	-

Table 2. Applicable Auto Switches/Refer to pages 941 and 1067 for further information on auto switches.

Refer to pages 518 and 519 for cylinders with auto sw	itches.
---	---------

- Auto switch proper mounting position, mounting height and operating distance
- · Operating range
- · Auto switch mounting

Basic Specifications

Action			D	ouble acting		
Bore size			50 mm			
Fluid				Air		
Minimum oper	ating pre	essure	CKQ: CLKQ: (With loc 0.1 MPa 0.15 MPa*			
Maximum	Guide pin	uide pin 012.5 to 013.0 0.7 MPa				
operating pressure	diameter	ø14.5 to ø30.0	1.0 MPa			
Proof	Guide pin	ø12.5 to ø13.0	1.0 MPa			
pressure	diameter	ø14.5 to ø30.0		1.5 MPa		
Ambient and f	luid temp	perature	-10 to 6	60°C (No freezing)		
Cushion				None		
Lubrication			Non-lube			
Piston speed (Clamp s	peed)	50 to 150 mm/sec			
Port size (Cyli	nder por	t)	1/4	(Rc, NPT, G)		

* Minimum operating pressure is 0.2 MPa when cylinder part and locking part use the same piping.

Lock Specifications

Locking action	Spring locking (Exhaust locking)
Unlocking pressure	0.2 MPa or more
Lock starting pressure	0.05 MPa or less
Locking direction	Lock at extended direction (Clamp holding)
Port size (Lock release port)	1/8 (Rc, NPT, G)
Holding force (Maximum static load)	982 N

Clamping Force

										[N]		
Model	Guide pin		Operating pressure [MPa]									
woder	diameter	0.2	0.3	0.4	0.5	0.6	0.7	0.8	0.9	1.0		
C(L)KQ ^g	ø12.5 to ø13.0	164.9	329.8	494.7	659.6	824.5	989.4	—	—	—		
C(L)KQp	ø14.5 to ø30.0	164.9	329.8	494.7	659.6	824.5	989.4	Note 1) 1154.3	Note 1) 1319.2			

Note 1) Lock holding force of the CLKQ is 982 N. Design the circuit such that the lock holding force is taken into consideration when the operating pressure exceeds 0.75 MPa.

The operating pressure should be not greater than the lock holding force as it may cause wearing out and/or damage of the locking part and shorten lock life and may lead to possible failure if applied with a load larger than the lock holding force.

Note 2) It takes approximately 0.3 seconds for the cylinder to operate to generate clamping force from an unclamping state (when no speed controller is installed). Design circuit taking into consideration the time before the clamping force is generated.

Note 3) Determine the clamping force according to the strength of the workpiece. It can be damaged if the clamping force is too large.

Weight

				[kg]
Model				
Guide pin diameter	Witho	ut lock	With	lock
[mm]	LOW	HIGH	LOW	HIGH
ø12.5 to ø13.0	1.63	1.8	2.15	2.32
ø14.5 to ø15.0	1.63	1.8	2.15	2.32
ø15.5 to ø16.0	1.64	1.81	2.15	2.32
ø17.5 to ø18.0	1.68	1.86	2.2	2.37
ø19.5 to ø20.0	1.69	1.87	2.2	2.38
ø24.5 to ø25.0	1.75	1.96	2.26	2.47
ø29.5 to ø30.0	1.79	2	2.31	2.51

Replacement Parts

MK
MK2T
CK🗆1
CLK2
CLKG
CKQ Clkq
CK□ Clk□
CKQ□

The guide pin and clamp arm are the same as those of the D series. For details, refer to page 502.

507 A

D-

-X□


CKQ^G_PU/CLKQ^G_PU Series


Dimensions


CKQ⁹UA50

* Refer to "How to Order" on page 506 for positional relationship of the mounting surface and port.

 * The figures below indicate the CKQGUA50-DRAHZ.



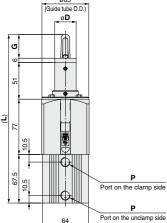


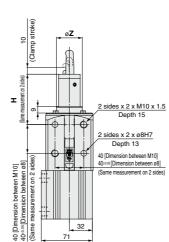

ന് = 0.5 mm x 2

/t = 1 mm x 2

2

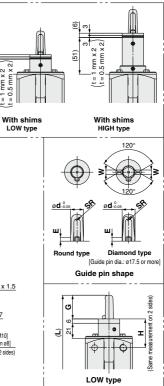

Hole diameter						Н			L				
oameter of workpiece	С	øD	ød	E	G	LOW type	HIGH type	ĸ	LOW type	HIGH type	SR	w	øΖ
			ø12.5	= 10	33	Without	Without						ø36
			ø12.7	= 9		shims 40±0.05	shims 70±0.05					_	
ø13	9	ø30	ø12.8	= 8		With	70 ^{±0.05} With	6	204.5	234.5	4		
			ø12.9	= 8		shims	shims						
			ø13.0	= 7		40	70						
		ø30	ø14.5	= 9	34	Without	ut Without					_	ø36
			ø14.7	= 8		4 With shims	shims						
ø15	11		ø14.8	= 8			70±0.05 With	7	205.5	235.5	5		
			ø14.9	= 7			shims						
			ø15.0	= 7	1	40	70						
			ø15.5	= 10		Without	Without						ø36
			ø15.7	= 9	1	shims	shims						
ø16	11	ø30	ø15.8	= 8	34	40±0.05 With	70±0.05 With	7	205.5	235.5	5.5	-	
			ø15.9	= 8	1	shims	shims						
			ø16.0	= 7	1	40	70						


Hole diameter						ŀ	1			_			
af	С	øD	ød	Е	G	LOW	HIGH	K	LOW	HIGH	SR	w	øΖ
workpiece						type	type		type	type			
			ø17.5	= 10		Without	Without						
			ø17.7	= 9		shims	shims 70±0.05						
ø 18	12	ø35	ø17.8	= 8	37	40±0.05 With	70 ^{±0.05} With	7	208.5	238.5	6	6	ø40
			ø17.9	= 8	1	shims	shims						
			ø18.0	= 7	1	40	70						
			ø19.5	= 10		Without	Without						
			ø19.7	= 9	1	shims	shims						
ø 20	13	ø35	ø19.8	= 8	39	40±0.05 With	70±0.05 With	8	210.5	240.5	7	7	ø40
			ø19.9	= 8	1	shims	shims						
			ø20.0	= 7	1	40	70						
			ø24.5	= 10		Without	Without						
			ø24.7	= 9	1	shims 40±0.05	shims 70±0.05						
ø 25	16	ø40	ø24.8	= 8	39	With	With	8	210.5	240.5	9.5	7	ø47
			ø24.9	= 8	1	shims	shims						
			ø25.0	= 7	1	40	70						
			ø29.5	= 10		Without	Without						
			ø29.7	= 9]	shims 40±0.05	shims 70±0.05						
ø 30	18	ø40	ø29.8	= 8	39	40±0.05 With	70±0.05 With	8	210.5	240.5	11	9	ø47
			ø29.9	= 8]	shims	shims						
			ø30.0	= 7	1	40	70						

	Р	
Nil	TN	TF
Rc1/4	NPT1/4	G1/4
508		

SMC


Pin Clamp Cylinder CKQ^G U/CLKQ^G U Series

Dimensions

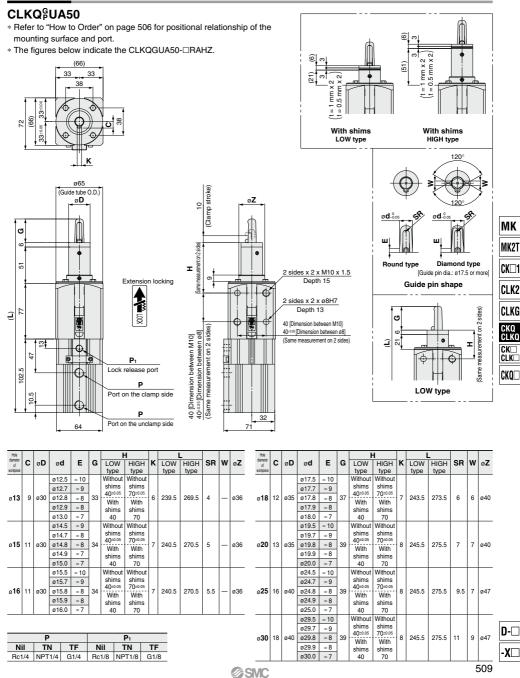

Pin Clamp Cylinder K series CC

How to Order

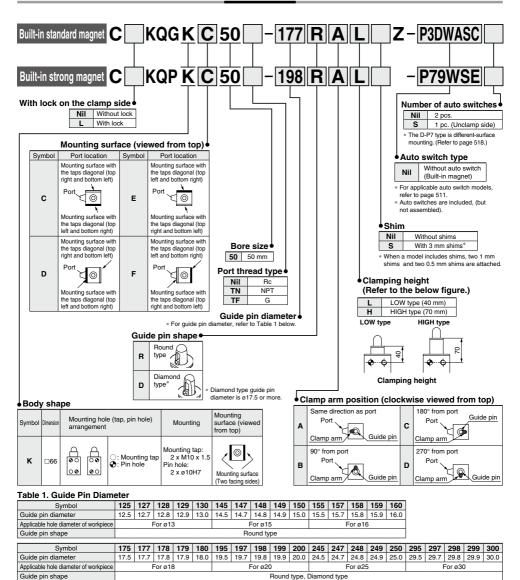

510

SMC

Pin Clamp Cylinder CKQ^G/K/CLKQ^G/K Series

Applicable cylinder series	Туре	Auto switch model	Applicable magnetic field	Electrical entry	Indicator light	Wiring (Pin no in use)	Load voltage	Lead wire length	Applicable load
		D-P3DWASC		Dre wired connector		2-wire (3-4)		0.3 m	
		D-P3DWASE		Pre-wired connector		2-wire (1-4)		0.3 m	
	Solid state auto switch	D-P3DWA]			0.5 m	
		D-P3DWAL	AC magnetic field	Grommet		2-wire	24 VDC	3 m	
C(L)KQG series		D-P3DWAZ	(Single-phase AC welding		2-color indicator			5 m	
	uuto switch	D-P4DWSC	magnetic field)	Pre-wired connector	Indicator	2-wire (3-4)		0.3 m	
		D-P4DWSE		Tie-wired connector		2-wire (1-4)		0.3 11	Relay, PLC
		D-P4DWL		Grommet		2-wire		3 m	
		D-P4DWZ		Gionnet		2-wire		5 m	
	Reed	D-P79WSE	DC/AC	Pre-wired connector	2-color indicator	2-wire (1-4)	24 VDC	0.3 m	
C(L)KQP series	auto switch	D-P74L	magnetic field	Crommet	1-color	0 using	24 VDC	3 m	1
		D-P74Z		Grommet	indicator	2-wire	100 VAC	5 m	

Table 2. Applicable Auto Switches/Refer to pages 941 to 1067 for further information on auto switches.

Refer to pages 518 and 519 for cylinders with a	uto switches.
---	---------------

- Auto switch proper mounting position, mounting height and operating distance
- · Operating range
- · Auto switch mounting

Basic Specifications

Action			Double acting				
Bore size			50 mm				
Fluid				Air			
Minimum oper	ating pre	essure	CKQ⊟: 0.1 MPa	CLKQ□ (With lock): 0.15 MPa*			
Maximum	Guide pin	ø12.5 to ø13.0	0.7 MPa				
operating pressure	diameter	ø14.5 to ø30.0		1.0 MPa			
Proof	Guide pin	ø12.5 to ø13.0		1.0 MPa			
pressure	diameter	ø14.5 to ø30.0		1.5 MPa			
Ambient and f	luid temp	perature	-10 to 6	50°C (No freezing)			
Cushion				None			
Lubrication				Non-lube			
Piston speed (Clamp s	peed)	50 to 150 mm/sec				
Port size (Cyli	nder por	t)	1/4	(Rc, NPT, G)			

* Minimum operating pressure is 0.2 MPa when cylinder part and locking part use the same piping.

Lock Specifications

Locking action	Spring locking (Exhaust locking)
Unlocking pressure	0.2 MPa or more
Lock starting pressure	0.05 MPa or less
Locking direction	Lock at extended direction (Clamp holding)
Port size (Lock release port)	1/8 (Rc, NPT, G)
Holding force (Maximum static load)	982 N

Clamping Force

										[N]			
Model	Guide pin		Operating pressure [MPa]										
	diameter	0.2	0.3	0.4	0.5 0.6		0.7	0.8	0.9	1.0			
C(L)KQ ^g	ø12.5 to ø13.0	164.9	329.8	494.7	659.6	824.5	989.4	—	—	_			
C(L)KQp	ø14.5 to ø30.0	164.9	329.8	494.7	659.6	824.5	989.4	Note 1) 1154.3	Note 1) 1319.2				

Note 1) Lock holding force of the CLKQ is 982 N. Design the circuit such that the lock holding force is taken into consideration when the operating pressure exceeds 0.75 MPa.

The operating pressure should be not greater than the lock holding force as it may cause wearing out and/or damage of the locking part and shorten lock life and may lead to possible failure if applied with a load larger than the lock holding force.

Note 2) It takes approximately 0.3 seconds for the cylinder to operate to generate clamping force from an unclamping state (when no speed controller is installed). Design circuit taking into consideration the time before the clamping force is generated.

Note 3) Determine the clamping force according to the strength of the workpiece. It can be damaged if the clamping force is too large.

Weight

				[kg]					
Model	C(L)KQ [§] K								
Guide pin diameter	Witho	ut lock	With lock						
[mm]	LOW	HIGH	LOW	HIGH					
ø12.5 to ø13.0	1.63	1.8	2.15	2.32					
ø14.5 to ø15.0	1.63	1.8	2.15	2.32					
ø15.5 to ø16.0	1.64	1.81	2.15	2.32					
ø17.5 to ø18.0	1.68	1.86	2.2	2.37					
ø19.5 to ø20.0	1.69	1.87	2.2	2.38					
ø24.5 to ø25.0	1.75	1.96	2.26	2.47					
ø29.5 to ø30.0	1.79	2	2.31	2.51					

Replacement Parts

MK
MK2T
CK□1
CLK2
CLKG
CKQ CLKQ
CK□ Clk□
CKQ

D-

-X□

511 @

The guide pin and clamp arm are the same as those of the D series. For details, refer to page 502.

SMC

CKQ^G_PK/CLKQ^G_PK Series

Dimensions


CKQ[§]KC50


¢

Ф

€

- Refer to "How to Order" on page 510 for positional relationship of the mounting surface and port.
- * The figures below indicate the CKQGKC50-□RAHZ.

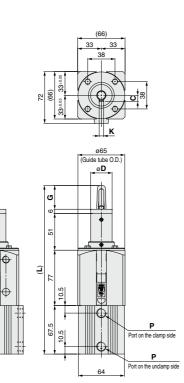

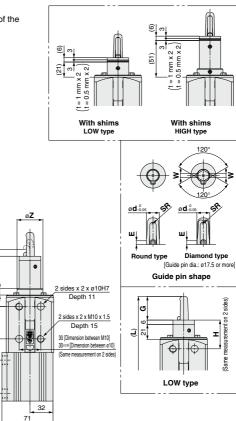

Hole diameter						н			L				
of vorkpiece	С	øD	ød	E	G	LOW	HIGH	ĸ	LOW	HIGH	SR	w	øΖ
NUNPICE			ø12.5 ø12.7	= 10 = 9	33	type Without shims	type Without shims		type 204.5	type			ø36
ø 13 9	9	ø30	ø12.7 ø12.8	= 9		40±0.05 With	70±0.05 With	6		234.5	4	-	
			ø12.9 ø13.0	= 8 = 7		shims 40	shims 70						
ø15		ø30	ø14.5	= 9	34	Without	Without	hout ims ±0.05 /ith ims	205.5		5	_	ø36
	11		ø14.7 ø14.8	= 8 = 8		40±0.05 With	70±0.05 With			235.5			
			ø14.9 ø15.0	= 7 = 7		shims 40	shims 70						
			ø15.5	= 10		Without	Without						
			ø15.7	= 9		shims 40±0.05	shims 70±0.05	_					
ø16	11	ø30	ø15.8 ø15.9	= 8 = 8	34	With	With shims	7	205.5	235.5	5.5	-	ø36
			ø16.0	= 7		40	70						

Hole						F	4			-			
diameter of workpiece	С	øD	ød	E	G	LOW type	HIGH type	ĸ	LOW type	HIGH type	SR	w	øΖ
			ø17.5	= 10		Without	Without		type	type		_	
			ø17.7	= 9	1	shims	shims						
ø 18	12	ø35	ø17.8	= 8	37	40±0.05 With	70±0.05 With	7	208.5	238.5	6	6	ø40
			ø17.9	= 8		shims	shims						
			ø18.0	= 7		40	70						
			ø19.5	= 10		Without	Without						
			ø19.7	= 9		shims 40±0.05	shims 70±0.05						
ø 20	13	ø35	ø19.8	= 8	39	With	With	8	210.5	240.5	7	7	ø40
			ø19.9	= 8		shims	shims						
			ø20.0	= 7		40	70						
			ø24.5	= 10		Without	Without						
			ø24.7	= 9		shims 40±0.05	shims 70±0.05						
ø 25	16	ø40	ø24.8	= 8	39	With	With	8	210.5	240.5	9.5	7	ø47
			ø24.9	= 8		shims	shims						
			ø25.0	= 7		40	70						
			ø29.5	= 10		Without	Without						
			ø29.7	= 9		shims 40±0.05	70±0.05						
ø 30	18	ø40	ø29.8	= 8	39	With	With	8	210.5	240.5	11	9	ø47
			ø29.9	= 8		shims	shims						
			ø30.0	= 7		40	70						

P										
Nil	TN	TF								
Rc1/4	NPT1/4	G1/4								
512										

SMC

(Clamp stroke)

9

Same measurement on 2 sides)


45 [Dimension between M10] 45:005 [Dimension between ø10] (Same measurement on 2 sides)

σ


т

Pin Clamp Cylinder CKQ^G_PK/CLKQ^G_PK Series

Dimensions

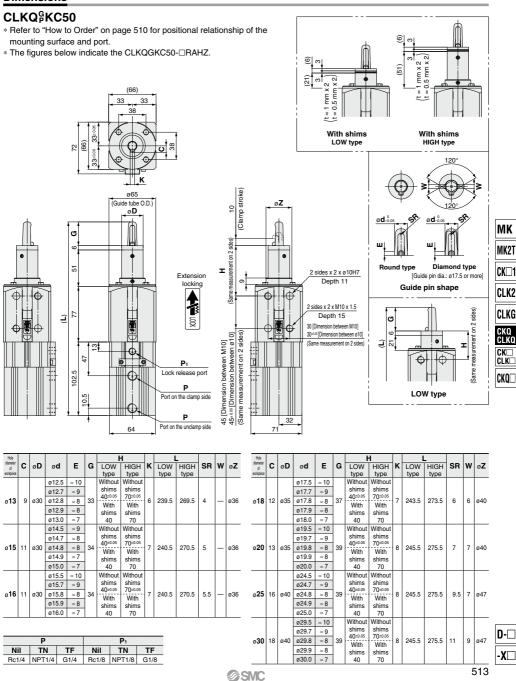

How to Order

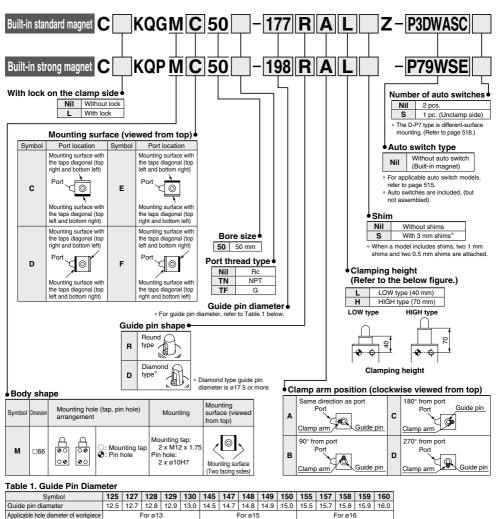

Guide pin shape	Round type																			
Symbol	175	177	178	179	180	195	197	198	199	200	245	247	248	249	250	295	297	298	299	300
Guide pin diameter	17.5	17.7	17.8	17.9	18.0							24.7							29.9	
Applicable hole diameter of workpiece			For ø18	3		For ø20				For ø25				For ø30						
Guide pin shape		Round type, Diamond type																		
514	600																			

SMC SMC

Pin Clamp Cylinder CKQ^GM/CLKQ^GM Series

Applicable cylinder series	Туре	Auto switch model	Applicable magnetic field	Electrical entry	Indicator light	Wiring (Pin no in use)	Load voltage	Lead wire length	Applicable load
		D-P3DWASC		Pre-wired connector		2-wire (3-4)		0.3 m	
		D-P3DWASE		The wired connector		2-wire (1-4)		0.0 111	
	.)KQG series Solid state auto switch	D-P3DWA						0.5 m	
		D-P3DWAL	AC magnetic field	Grommet	2-color	2-wire	24 VDC	3 m	
C(L)KQG series		D-P3DWAZ	(Single-phase AC welding					5 m	
		D-P4DWSC	magnetic field)	Pre-wired connector	Indicator	2-wire (3-4)		0.3 m	Relay, PLC
		D-P4DWSE				2-wire (1-4)			
		D-P4DWL		Grommet]	2-wire		3 m	1 1 20
		D-P4DWZ		Gronmet		2-wire		5 m	1
	Reed	D-P79WSE	DC/AC	Pre-wired connector	2-color indicator	2-wire (1-4)	24 VDC	0.3 m	
C(L)KQP series	auto switch	D-P74L	magnetic field	Querrant	1-color	0 united	24 VDC	3 m	
		D-P74Z		Grommet	indicator	2-wire	100 VAC	5 m	

Table 2. Applicable Auto Switches/Refer to pages 941 to 1067 for further information on auto switches.

Refer to pages 518 and 519 for cylinders with aut	o switches.
---	-------------

- Auto switch proper mounting position, mounting height and operating distance
- · Operating range
- · Auto switch mounting

Basic Specifications

Action			D	ouble acting			
Bore size			50 mm				
Fluid				Air			
Minimum oper	ating pre	essure	CKQ :: CLKQ (With lo 0.1 MPa 0.15 MPa*				
Maximum	Guide pin	ø12.5 to ø13.0	0.7 MPa				
operating pressure	diameter	ø14.5 to ø30.0		1.0 MPa			
Proof	Guide pin	ø12.5 to ø13.0	1.0 MPa				
pressure	diameter	ø14.5 to ø30.0		1.5 MPa			
Ambient and f	luid temp	perature	-10 to 60°C (No freezing)				
Cushion				None			
Lubrication			Non-lube				
Piston speed	Clamp s	peed)	50 to 150 mm/sec				
Port size (Cyli	nder por	t)	1/4	(Rc, NPT, G)			

* Minimum operating pressure is 0.2 MPa when cylinder part and locking part use the same piping.

Lock Specifications

Locking action	Spring locking (Exhaust locking)					
Unlocking pressure	0.2 MPa or more					
Lock starting pressure	0.05 MPa or less					
Locking direction	Lock at extended direction (Clamp holding)					
Port size (Lock release port)	1/8 (Rc, NPT, G)					
Holding force (Maximum static load)	982 N					

Clamping Force

										[N]			
Model	Guide pin	Operating pressure [MPa]											
woder	diameter 0		0.2 0.3 0.4 0.5 0.6 0.7		0.7	0.8	0.9	1.0					
C(L)KQ ^g	ø12.5 to ø13.0	164.9	329.8	494.7	659.6	824.5	989.4	—	—	_			
C(L)KQp	ø14.5 to ø30.0	164.9	329.8	494.7	659.6	824.5	989.4	Note 1) 1154.3	Note 1) 1319.2				

Note 1) Lock holding force of the CLKQ is 982 N. Design the circuit such that the lock holding force is taken into consideration when the operating pressure exceeds 0.75 MPa.

The operating pressure should be not greater than the lock holding force as it may cause wearing out and/or damage of the locking part and shorten lock life and may lead to possible failure if applied with a load larger than the lock holding force.

Note 2) It takes approximately 0.3 seconds for the cylinder to operate to generate clamping force from an unclamping state (when no speed controller is installed). Design circuit taking into consideration the time before the clamping force is generated.

Note 3) Determine the clamping force according to the strength of the workpiece. It can be damaged if the clamping force is too large.

Weight

				[kg]							
Model		C(L)KQ ^g M									
Guide pin diameter	Witho	ut lock	With	lock							
[mm]	LOW	HIGH	LOW	HIGH							
ø12.5 to ø13.0	1.63	1.8	2.14	2.31							
ø14.5 to ø15.0	1.63	1.8	2.14	2.31							
ø15.5 to ø16.0	1.63	1.8	2.15	2.32							
ø17.5 to ø18.0	1.68	1.85	2.19	2.37							
ø19.5 to ø20.0	1.68	1.86	2.2	2.38							
ø24.5 to ø25.0	1.74	1.95	2.26	2.47							
ø29.5 to ø30.0	1.79	1.99	2.3	2.51							

Replacement Parts

MK
MK2T
CK□1
CLK2
CLKG
CKQ CLKQ
CK□ Clk□
CKQ

The guide pin and clamp arm are the same as those of the D series. For details, refer to page 502.

SMC

□ **D-**□ 1 **-X**□

515 A


CKQ^G/CLKQ^G/M Series

Dimensions

CKQ⁹MC50



* The figures below indicate the CKQGMC50-□RAHZ.

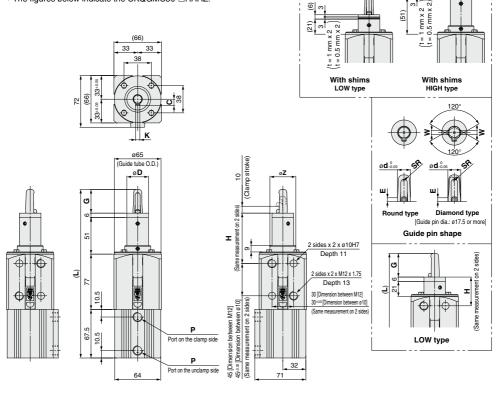

Hole diameter						ŀ	4		I	_			
of	C	øD	ød	E	G	LOW	HIGH	K	LOW	HIGH	SR	w	øΖ
workpiece						type	type	_	type	type			
			ø12.5	= 10		Without	Without						
			ø12.7	= 9		shims 40±0.05	shims 70±0.05						
ø 13	9	ø30	ø12.8	= 8	33	With	With	6	204.5	234.5	4	-	ø36
			ø12.9	= 8		shims	shims						
			ø13.0	= 7		40	70						
			ø14.5	= 9		Without	Without						
			ø14.7	= 8]	shims 40±0.05	shims 70±0.05	7			5	_	
ø15	11	ø30	ø14.8	= 8	34 With shims		70±0.05 With		205.5	235.5			ø36
			ø14.9	= 7		shims							
			ø15.0	= 7		40	70						
			ø15.5	= 10		Without	Without						
			ø15.7	= 9		shims 40±0.05	shims 70±0.05						
ø16	11	ø30	ø15.8	= 8	34	With	70±0.05 With	7	205.5	235.5	5.5	-	ø36
			ø15.9	= 8		shims	shims						
			ø16.0	= 7	1	40	70						

Hole diameter						F	н		H			-			
of workpiece	C	øD	ød	Е	G	LOW type	HIGH type	ĸ	LOW type	HIGH	SR	w	øΖ		
wanpece			ø17.5	= 10		Without	Without		type	type		_			
			ø17.7	= 9		shims	shims								
ø 18	12	ø35	ø17.8	= 8	37	40 ^{±0.05}	70±0.05	7	208.5	238.5	6	6	ø40		
5.0	·		ø17.9	= 8		With shims	With				-	-			
			ø18.0	= 7	1	40	70								
			ø19.5	= 10		Without	Without								
			ø19.7	= 9	1	shims	shims								
ø 20	13	ø35	ø19.8	= 8	39	40±0.05 With	70±0.05 With	8	210.5	240.5	7	7	ø40		
			ø19.9	= 8	1	shims	shims								
			ø20.0	= 7	1	40	70								
			ø24.5	= 10		Without	Without								
			ø24.7	= 9]	shims 40±0.05	shims 70±0.05								
ø 25	16	ø40	ø24.8	= 8	39	With	With	8	210.5	240.5	9.5	7	ø47		
			ø24.9	= 8		shims	shims								
			ø25.0	= 7		40	70								
			ø29.5	= 10		Without	Without								
			ø29.7	= 9		shims 40±0.05	shims 70±0.05								
ø 30	18	ø40	ø29.8	= 8	39	With	With	8	210.5	240.5	11	9	ø47		
			ø29.9	= 8		shims	shims								
			ø30.0	= 7		40	70								


0

Р											
Nil	TN	TF									
Rc1/4	NPT1/4	G1/4									
516											

SMC

Pin Clamp Cylinder CKQ^GM/CLKQ^GM Series

Dimensions

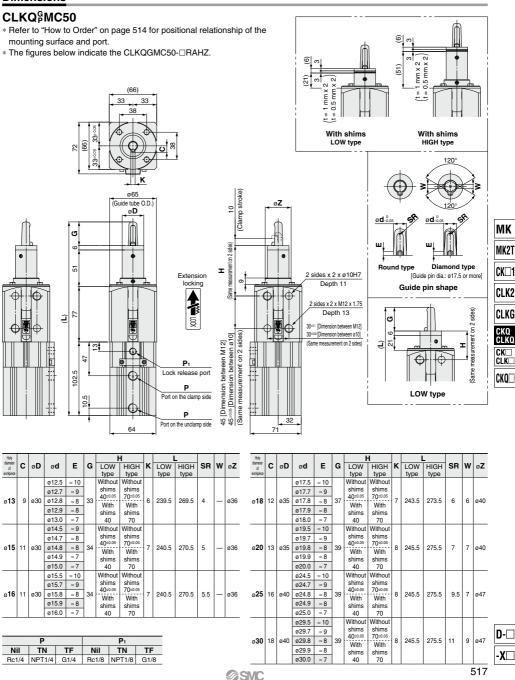

CKQ^G□/CLKQ^G□ Series Auto Switch Mounting

Auto Switch Proper Mounting Position, Mounting Height and Operating Distance

Auto Switch Proper Mounting Position

Mounting	Ro	ound groo	Rail mounting					
Model	D-P3D	WA□	D-P4	DW□	D-P74 D-P79WSE			
	Α	В	Α	B	Α	В		
CKQG	9.5 22.5		7	17 or more	_	—		
CLKQG	44.5 54.5 42		54.5 42 52 or r		—	—		
CKQP			—	_	5.5	20.5 or more		
CLKQP			_	_	40.5	55.5 or more		

Note) Adjust the auto switch after confirming the operating conditions in the actual setting.

D-P3DWA






Auto Switch Proper Mounting Height

Mounting	Round groo	Rail mounting				
Model	D-P3DWA	D-P4DW□	D-P74□ D-P79WSE			
C(L)KQG	45	50	-			
C(L)KQP	_	_	50			

 
[CLKQG]






D-P4DW□ [CKQG]



 





 




D-P74□ D-P79WSE [CKQP]

 

 

[CLKQP]

 



Operating Range

Cylinder model	Auto switch model	Operating range
C(L)KQG	D-P3DWA	7
CLINGG	D-P4DW	6.5
C(L)KQP	D-P74⊡ D-P79WSE	10

Values which include hysteresis are for guideline purposes only, they are not a guarantee (assuming approximately ±30% dispersion) and may change substantially depending on the ambient environment.

518

Auto Switch Mounting $CKQ_P^G \Box / CLKQ_P^G \Box$ Series

Auto Switch Mounting

For D-P3DWA (Fig. 1)

- 1. Insert the auto switch into the mating groove of the cylinder tube.
- Check the detecting position of the auto switch and fix the auto switch firmly with the hexagon socket head cap screw (M2.5 x 12 L).
- 3. If the detecting position is changed, go back to step 1.
- Note 1) Ensure that the auto switch is covered with the mating groove to protect the auto switch.
- Note 2) The tightening torque for the hexagon socket head cap screw (M2.5 x 12 L) is 0.2 to 0.3 N·m.

For D-P4DW (Fig. 2)


- Mount the auto switch mounting bracket onto the auto switch mounting nut by tightening the bracket mounting screws (M2.5) lightly.
- 2. Insert the auto switch mounting nut into the switch groove.
- Fix the auto switch and the auto switch mounting bracket temporarily with the auto switch mounting screw (M3).
- Check the detecting position of the auto switch and fix the auto switch firmly with the auto switch mounting screws and bracket mounting screws. (The tightening torque is 0.25 to 0.35 N·m for M2.5 and 0.5 to 0.6 N·m for M3.)

Auto switch mounting bracket part number	Contents/Quantity
BQ7-050	Auto switch mounting bracket x 1 Auto switch mounting nut x 1 Hexagon socket head cap screw x 2 Hexagon socket head cap screw x 2 (With spring washer) Spring washer x 2

For D-P74 and P79WSE (Fig. 3)

- Mount the auto switch mounting bracket onto the auto switch mounting nut by tightening the bracket mounting screws lightly through the hole on the top of bracket.
- Insert the nut section of the auto switch mounting bracket assembly (bracket + nut) into the groove of the rail and set it at the auto switch mounting position.
- Insert the auto switch mounting screws into the through hole of the auto switch, and fix the auto switch mounting bracket and auto switch temporarily.
- Check the detecting position of the auto switch and fix the auto switch firmly with the auto switch mounting screws and bracket mounting screws. (The tightening torque is 0.5 to 0.7 N·m.)
- * Be careful of the mounting direction of the D-P79WSE when installed to the auto switch mounting bracket. Be sure the softresin mold surface faces the auto switch mounting bracket side when mounting.

Auto switch mounting bracket part number	Contents/Quantity
BQP1T-050	Auto switch mounting bracket x 1 Auto switch mounting nut x 1 Hexagon socket head cap screw x 2 Hexagon socket head cap screw x 2 (With spring washer)

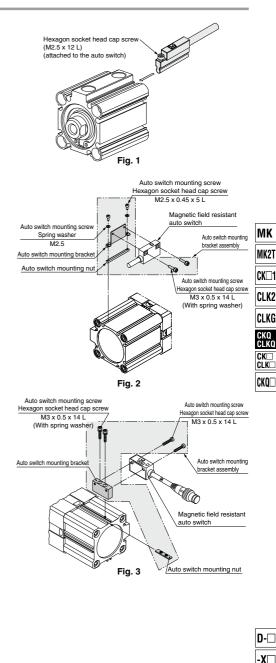



Be sure to read this before handling the products. Refer to back page 50 for Safety Instructions and pages 3 to 12 for Actuator and Auto Switch Precautions.

Design

MWarning

1. There is a possibility of dangerous sudden action by cylinders if sliding parts of machinery are twisted due to external forces, etc.

In such cases, human injury may occur; e.g., by catching hands or feet in the machinery, or damage to the machinery itself may occur. Therefore, the machine should be adjusted to operate smoothly and designed to avoid such dangers.

2. A protective cover is recommended to minimize the risk of personal injury.

If a stationary object and moving parts of a cylinder are in close proximity, personal injury may occur. Design the structure to avoid contact with the human body.

3. Securely tighten all stationary parts and connected parts so that they will not become loose.

Especially when a cylinder operates with high frequency or is installed where there is a lot of vibration, ensure that all parts remain secure.

4. Design the equipment so that the maximum theoretical force is not applied to the cylinder.

If the cylinder becomes damaged there is a danger of human injury and or equipment damage.

Select the mounting base by taking into consideration its rigidity because the cylinder applies a large amount of force.

Otherwise there is a danger of human injury and or equipment damage.

6. Consider the possibility of a decrease in circuit pressure when power is turned off.

If the cylinder is used for a clamping application there is a danger of the workpiece being released since the circuit pressure decreases when the power is turned off. Install safety equipment to prevent human injury and damage to machine and or equipment. The same consideration should be given for hanging or lift applications to prevent dropping of a workpiece.

7. Consider a possible loss of power source.

Measures should be taken to protect against bodily injury and equipment damage in the event that there is a loss of power to equipment controlled by pneumatics, electricity, or hydraulics.

8. Consider emergency stops.

Design so that human injury and/or damage to machinery and equipment will not be caused when machinery is stopped by a safety device under abnormal conditions, a power outage or a manual emergency stop.

9. Consider the action when operation is restarted after an emergency stop or abnormal stop.

Design the machinery so that human injury or equipment damage will not occur upon restart of operation.

When the cylinder has to be reset at the starting position, install manual safely equipment.

10. Intermediate stop

In the case of 3-position closed center of a valve, it is difficult to make a piston stop at the required position as accurately and precisely as with hydraulic pressure due to compressibility of air. Furthermore, since valves and cylinders, etc. are not guaranteed for zero air leakage, it may not be possible to hold a stopped position for an extended period of time. Contact SMC in the case it is necessary to hold a stopped position for an extended period. Do not intermediately stop the CLKQ cylinder during a locking operation because it will shorten the life of the cylinder.

Selection

A Warning

1. Confirm the specifications.

The products featured in this catalog are designed for use in industrial compressed air systems. If the products are used in conditions where pressure and/or temperature are outside the range of specifications, damage and/or malfunctions may occur. Do not use in these conditions. (Refer to the specifications.)

Consult SMC if you use a fluid other than compressed air.

 Do not use for applications other than clamping. Since the cylinder performs both positioning and clamping simultaneously, any other application may cause an accident or damage to the cylinder.

3. Do not modify the cylinder.

Do not modify the cylinder because it may cause damage to it, shorten the protect life, and or cause an accident.

The following table shows the maximum thickness of workpieces that be clamped.

Model	Without shims	With shims
CKQG	10 mm	10 to 13 mm
CLKQG	10 mm	10 to 13 mm
CKQP	10 mm	10 to 13 mm
CLKQP	10 mm	10 to 13 mm

Workpieces to be clamped should not be thicker than those shown in the table.

- Clamp only the flat side of a workpiece.
- 6. If a workpiece is transferred three dimensionally and at high speed by a robot after it is clamped, the work weight must be 1/10 or less of the theoretical thrust (clamping force), or stoppers should be installed as a preventive measure for the movement of the workpiece.
- 7. Do not clamp without setting the workpiece on a work surface.

If the clamp arm makes contact with the seat surface without clamping a workpiece, the surface flatness condition of the seat surface and the clamp arm (the clamping surface) will be adversely effected.

8. Do not apply an impact load, strong vibrations or rotating force to the product.

Since the cylinder is composed of precisely manufactured parts, they may be damaged and the life may be shortened if a strong impact load, strong vibration or rotating force are applied.

∕ SMC



Be sure to read this before handling the products. Refer to back page 50 for Safety Instructions and pages 3 to 12 for Actuator and Auto Switch Precautions.

Selection

Warning

[For the CLKQG/P series only]

9. Do not use for intermediate cylinder stops.

This cylinder is designed to lock in a clamped condition to prevent unwanted movement. Do not perform any intermediate stops while the cylinder is operating, since it will shorten the product life.

10. Select the correct locking position since this cylinder does not generate a holding force opposite to the locking direction.

The forwarded lock type (F type) clamp does not generate a holding force in the opposite direction (clamping direction). In addition the locking direction can not be changed.

11. Even when locked, there may be a stroke movement of approximately 1 mm in the locking direction due to external forces, such as the weight of the workpiece.

Even when locked, if air pressure drops, a stroke movement of approximately 1 mm may occur in the locking direction. This is caused by external forces, such as, the workpiece weight due to the general characteristics of the locking mechanism.

МК
MK2T
CK🗆1
CLK2
CLKG
CKQ CLKQ
CK□ CLK□
CKQ□



 


Be sure to read this before handling the products. Refer to back page 50 for Safety Instructions and pages 3 to 12 for Actuator and Auto Switch Precautions.

Pneumatic Circuit

MWarning

 Recommended pneumatic circuit for the CKQG/P series The following is an example of a basic meter-out control circuit for operating a cylinder using an air filter, a regulator, a solenoid valve and a speed controller.



Recommended pneumatic circuit

- Recommended pneumatic circuit for the CLKQG/P series
 Drop prevention circuit
 - 1) Do not use 3 position valves with circuit example 1. The lock may be released due to inflow of the unlocking pressure.
 - 2) Install speed controllers as meter-out control. (Circuit example 1) When they are not installed or they are used under meter-in control, it may cause malfunction.
 - 3) Branch off the compressed air piping for the lock unit between the cylinder and the speed controller. (Circuit example 1) Note that branching off in other sections may shorten the

service life.

- 4) Perform piping so that the unlocking port side going from the piping junction is short. (Circuit example 1) If the piping of unlocking port side is longer than that of the cylinder port from the piping junction, this may cause unlocking malfunction or shorten the service life.
- 5) Be aware of reverse exhaust pressure flow from common exhaust type valve manifolds. (Circuit example 1)

Since the lock may be released due to reverse exhaust pressure flow, use an individual exhaust type manifold or single type valve.

- 6) Be sure to release the lock before operating the cylinder. (Circuit example 2) When the lock release delays, a cylinder may eject at high speed, which is extremely dangerous. It may also damage the cylinder, greatly shorten the service life or cause locking malfunction. Even when the cylinder moves freely, be sure to release the lock and operate the cylinder.
- Be aware that the locking action may be delayed due to the piping length or the timing of exhaust. (Circuit example 2)

The locking action may be delayed due to the piping length or the timing of exhaust, which also makes the stroke movement toward the lock larger. Install the solenoid valve for locking closer to the cylinder than the cylinder drive solenoid valve.

Emergency stop circuit


- 1) Perform emergency stops with the pneumatic circuit. (Circuit examples 3 and 4) This cylinder is designed for locking against inadvertent movement from a stationary condition. Do not perform intermediate stops while the cylinder is operating, as this may damage the cylinder, cause unlocking malfunction or shorten the service life. Emergency stops must be performed with the pneumatic circuit, and workpieces must be held with the
- locking mechanism after the cylinder fully stops.
 2) When restarting the cylinder from the locked state, remove the workpiece and exhaust the residual pressure in the cylinder. (Circuit examples 3 and 4) A cylinder may eject at high speed, which is extremely dangerous. It may also damage the cylinder, greatly shorten the service life or cause locking malfunction.

3) Be sure to release the lock before operating the cylinder. (Circuit example 4)

When the lock release delays, the cylinder may eject at high speed, which is extremely dangerous. It may also damage the cylinder, greatly shorten the service life or cause locking malfunction. Even when the cylinder moves freely, be sure to release the lock and operate the cylinder.

- Drop prevention circuit, Emergency stop circuit
- 1) If installing a solenoid valve for a lock unit, be aware that repeated supply and exhaustion of air may cause condensation. (Circuit examples 2 and 4) The lock unit operating stroke is very small and so the pipe is long. If supplying and exhausting air repeatedly, condensation, which occurs by adiabatic expansion, accumulates in the lock unit. This may then cause air leakage and an unlocking malfunction due to corrosion of internal parts.

Circuit example

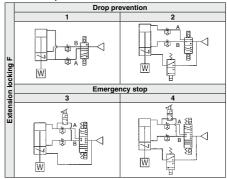

Mounting

▲Caution

1. Do not use the cylinder until it is confirmed that the equipment is operating correctly.

After installation, maintenance or replacement, connect the compressed air or electricity and verify that the installation is correct by performing appropriate function and/or leakage tests.

- 2. Do not dent the cylinder tube or the guide pin parts. Slight deformation will cause a malfunction since the tube I.D. is manufactured with a tight tolerance. Excessive impact will cause damage to the guide pin because it is heat treated.
- Prevent any foreign materials, such as machining chips, from entering into internal cylinder from the air supply port.

When the mounting holes for the cylinder are made, machined chips may enter the cylinder from the air supply port if the cylinder is left near the installation site. Prevent the machining chips from entering into the cylinder.

4. The opening part of a guide pin should not face in the same direction as oncoming spatter.

If the spatter enters the cylinder from the opening part of the guide pin, it will shorten the product life and cause a malfunction.

SMC



 
Be sure to read this before handling the products. Refer to back page 50 for Safety Instructions and pages 3 to 12 for Actuator and Auto Switch Precautions.

Mounting


ACaution

5. Consider the welding point of the guide pin when determining the direction of the clamp arm setting.

The clamp arm will be damaged if clamping is performed at the welded point of the guide pin. Therefore, set the clamping direction as illustrated below, so that the welded point is not effected by clamping.



 - When assembling and adjusting the product, begin the task by applying pressure only to the unlocking port (for the CLKQG/P series only).
- 7. When attaching a cylinder to the equipment, use the tightening torque specified in the below table.



- 8. Check the auto switch operation when the product is used where welding is performed.
- 9. When installing a cylinder with an auto switch, secure enough space on the bottom side of the cylinder providing the minimum bending radius for the lead wire to permit better serviceability (such as replacement of groove mounting auto switches).

10. Operating manual

Install the products and operate them only after reading the operating manual carefully and understanding its contents. Also, keep the manual where it can be referred to as necessary.

Piping

 
≜Caution

1. Before piping

Before piping, it should be thoroughly blown out with air (flushing) or washed to remove chips, cutting oil and other debris from inside the pipe.

2. Wrapping of sealant tape

When screwing piping or fittings into ports, ensure that chips from the pipe threads or sealing material do not get inside the piping. Also, when the sealant tape is used, leave 1.5 to 2 thread ridges exposed at the end of the threads.




3. Piping length should be short.

If the piping to the cylinder is too long, the volume of water vapor in the internal tubing increases beyond that of the internal cylinder due to the generation of water vapor by adiabatic expansion. Since the water vapor stays inside of the tubing without being released into the air, repeated operation results in the generation of water. Grease in the cylinder is drained out as it flows away with the water. This action lowers the smoothness in the cylinder, resulting in air leakage due to worn out seals, and or malfunction due to increased friction resistance. Please do the following to prevent this problem:

 Tubing from a solenoid valve to a cylinder should be as short as possible to assure the evacuation of the generated water vapor into the air.

As a guide, the air capacity in the cylinder, which when converted to atmospheric pressure x 0.7 should be \geq the piped tubing capacity.

 - Pipe a speed exhaust controller ASV and a quick exhaust valve to a cylinder to exhaust the exhaust pressure directly to the air.
- Piping port should face downward so that the generated moisture inside tubing does not easily return to the cylinder.





523



Be sure to read this before handling the products. Refer to back page 50 for Safety Instructions and pages 3 to 12 for Actuator and Auto Switch Precautions.

Lubrication

A Caution

1. Lubrication for the CKQG/P cylinder

The cylinder is lubricated at the factory, and can be used without further lubrication.

In the event that lubricant is used, install a lubricator in the circuit and use Class 1 turbine oil (without additives) ISO VG-32. A malfunction can occur due to loss of the original lubricant if lubrication is stopped in the future. Therefore, once lubrication is applied, it must be used continuously.

2. Lubrication for the CLKQG/P cylinder

Do not lubricate because it may considerably lower the locking performance.

Maintenance


 If spatter enters the cylinder body, remove it by first detaching the covers. Do not scratch or make dents on the sliding parts of the piston rod by striking it with other objects or grasping them with other objects.

Since the outside diameter of a piston rod is manufactured with a tight tolerance, even a slight deformation can cause an operation malfunction.

Any scratches and dents on the sliding parts of the piston rod can cause damage to the seals, resulting in air leakage.

2. To release the cover, insert a flat head screwdriver in the notch on the cover and apply force.

If a finger is used to remove the cover, the edge of the cover's notch may injure the finger.

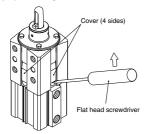

3. Drain flushing

Remove drainage from air filters regularly. (Refer to the specifications.)

Handling

Magnetic field resistant auto switches D-P79WSE/D-P74□ type are specifically for use with magnetic field resistant cylinders and are not compatible with general auto switches or cylinders. Magnetic field resistant cylinders are labeled as follows.

Magnetic field resistant cylinder with built-in magnet (For use with auto switch D-P7 type)

Mounting

- In order to fully use the capacity of magnetic field resistant auto switches, strictly observe the following precautions.
 - 1) Do not allow the magnetic field to occur when the cylinder piston is moving.
 - 2) When a welding cable or welding gun electrodes are near the cylinder, change the auto switch position to fall within the operational ranges shown in the graphs on page 525, or move the welding cable away from the cylinder.
 - Cannot be used in an environment where welding cables surround the cylinder.
 - Consult SMC when a welding cable and welding gun electrodes (something energized with secondary current) are near multiple switches.
- In an environment where spatter directly hits the lead wire, cover the lead wire with protective tubing. Use protective tubing I.D. Ø8 or more that has excellent heat resistance and flexibility.

Contact Capacity

 
Never operate a load that exceeds the maximum contact capacity of the auto switch.




Be sure to read this before handling the products. Refer to back page 50 for Safety Instructions and pages 3 to 12 for Actuator and Auto Switch Precautions.

Data: Magnetic Field Resistant Reed Switch (D-P79WSE type, D-P74 type) Safety Distance

Safety Distance from Side of Auto Switch






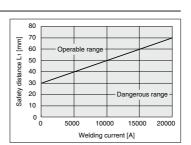







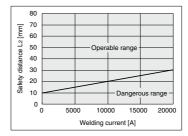

Safety Distance from Top of Auto Switch

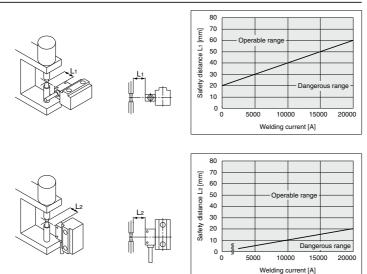

 

-X□ 525

D-🗌





Be sure to read this before handling the products. Refer to back page 50 for Safety Instructions and pages 3 to 12 for Actuator and Auto Switch Precautions.

Operation


AWarning

1. Do not unlock when an external force, such as a load or spring force is being applied.

This is very dangerous because the cylinder will move suddenly. Take the following steps.

- Restore the air pressure in the B line of the pneumatic circuit to operating pressure. Once restored, gradually let the air pressure drop.
- If air pressure cannot be used, prevent cylinder movement with a lifting device such as a jack, then release the lock.
- After all safety precautions have been confirmed, perform the manual release by following the steps shown below.

Carefully confirm that no one is inside the load movement range, that there is no danger even if the load moves suddenly, etc.

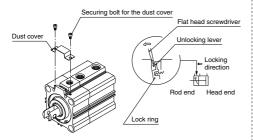

How to unlock manually

- 1) Remove the dust cover.
- Insert a flat head screwdriver on the rod end of the manual unlocking lever as shown in the figure above, and lightly push the screwdriver in the direction of the arrow (rod end) to unlock.

Pin Clamp Cylinder

High-Hardness Type Guide Pin

ø**50**

30% increase in guide pin material hardness

Existing model (C(L)KQ[50)

- A high-hardness guide pin ideal for dealing with high-strength material workpieces
- The specifications, mounting, and external dimensions are interchangeable with the existing model (C(L)KQ□50).

Specifications


Body shape	D series (Mounting tap: $4 \times M10 \times 1.5$ Pin hole: $2 \times 08H7$)
Guide pin shape	Round type
Guide pin diameter	155 to 300 (25 sizes)
Shim	With shims

Interchangeable with guide pins of the existing model

It is possible to exchange only the guide pin.

Guide pin Guide pin assembly Parallel pin for positioning (assembled before shipping)

 How to Order Guide Pin




C(L)KQDX3256



Table 1. Guide Pin Diameter

Guide pin diameter [mm]	Symbol
15.5	155
15.7	157
15.8	158
15.9	159
16.0	160
17.5	175
17.7	177
17.8	178
17.9	179
18.0	180
19.5	195
19.7	197
19.8	198
19.9	199
20.0	200
24.5	245
24.7	247
24.8	248
24.9	249
25.0	250
29.5	295
29.7	297
29.8	298
29.9	299
30.0	300



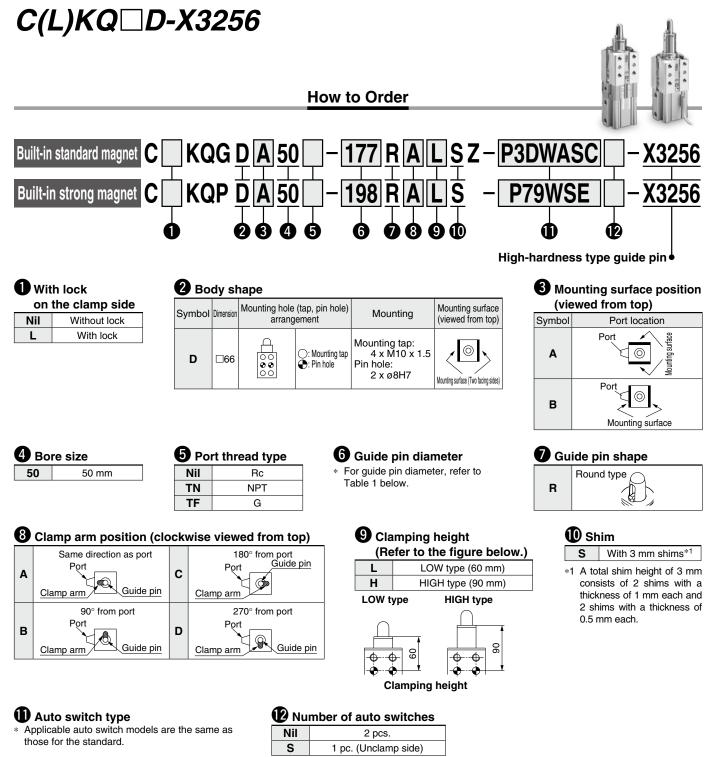

The D-P7 type is different-surface mounting.

Table 1. Guide Pin Diameter

Symbol	155	157	158	159	160	175	177	178	179	180	195	197	198	199	200	245	247	248	249	250	295	297	298	299	300
Guide pin diameter	15.5	15.7	15.8	15.9	16.0	17.5	17.7	17.8	17.9	18.0	19.5	19.7	19.8	19.9	20.0	24.5	24.7	24.8	24.9	25.0	29.5	29.7	29.8	29.9	30.0
Applicable hole diameter of workpiece		F	or ø1	6			For ø18				F	or ø2	0			F	or ø2	5			F	or ø3	0		

A Safety Instructions Be sure to read the "Handling Precautions for SMC Products" (M-E03-3) and "Operation Manual" before use.

SMC Corporation

Akihabara UDX 15F, 4-14-1, Sotokanda, Chiyoda-ku, Tokyo 101-0021, JAPAN Phone: 03-5207-8249 Fax: 03-5298-5362 https://www.smcworld.com © 2020 SMC Corporation All Rights Reserved

Specifications are subject to change without prior notice

and any obligation on the part of the manufacturer.

D-G