# Wide Type Parallel Style Air Gripper

Ø10, Ø16, Ø20, Ø25 Ø32, Ø40

(RoHS)

Weight

# Max. 10% reduction 585 g > 525 g

Weight reduced by changing the body shape and internal construction



- Dust-resistant option now available. (Made to order: -X85, -X86□)
- Closing width adjusting option now available. (Made to order: -X28)
- Small auto switches can be directly mounted.
- Mounting brackets are not required. This reduces assembly labor.
- Direct mounting is now possible due to the new groove shape.
  - Solid state auto switch: D-M9□
- Performance and mounting dimensions are interchangeable with the existing model.

#### 3 Types of Stroke Variations

[mm]

Opening/Closing strake	Stroke								
Opening/Closing stroke		ø16	ø20	ø25	ø32	ø40			
Short: MHL2-□ <b>D</b>									
S © Example 0	20	30	40	50	70	100			
Medium: MHL2-□ <b>D1</b>									
S @ 200 0 0	40	60	80	100	120	160			
Long: MHL2-□ <b>D2</b>									
S e ==== 0 0	60	80	100	120	160	200			





# Lightweight

#### Lightweight body achieved by changing the body shape

			[g]
Model	MHL2-□Z	MHL2	Reduction rate
MHL2-10D	280	280	0.0%
MHL2-16D	525	585	10.3%
MHL2-20D	940	1025	8.3%
MHL2-25D	1565	1690	7.4%
MHL2-32D	2875	2905	1.0%
MHL2-40D	5230	5270	1.0%




#### **Built-in dust protection mechanism (Standard)**

All rod rotating parts now feature a scraper with a dust lip.

#### Dust-resistant option now available. (Made to order) Pages 21 to 24

- In micro-powder (10 to 100  $\mu$ m) environments  $\rightarrow$  With double Lube-retainer (-X85)
  - Prevents particles and foreign matter from entering the gripper The Lube-retainer ensures a consistent film of grease, improving gripper endurance.
- In dusty environments → With heavy duty scraper + Lube-retainer (-X86□)
  - Applicable for environments containing particles or foreign matter
  - A grease film is formed on the rod by the Lube-retainer in order to improve endurance.
- \* Seal material can be NBR or fluororubber.

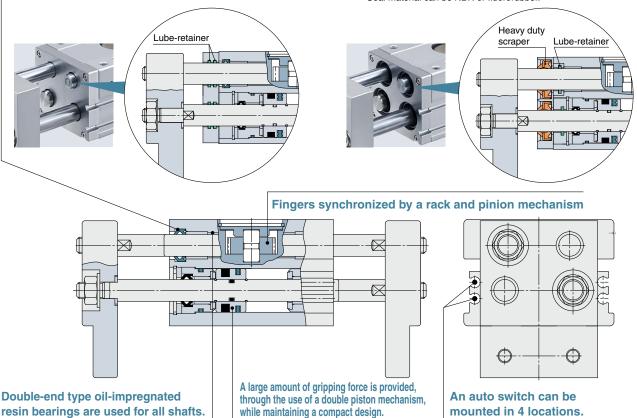

#### **Series Variations**

Series	Action			Bore si	ze [mm	]		Made to order	
Series	Action	10	16	20	25	32	40	Made to order	
MHL2-□Z	Double acting	•	•	•	•	•	•	-X4: Heat resistant (-10 to 100°C) -X5: Fluororubber seal -X28: With bolt for adjusting the closing width -X50: Without magnet -X53: Ethylene propylene rubber seal (EPDM) -X63: Fluorine grease -X79: Grease for food processing machines: Fluorine grease -X79A: Grease for food processing machines: Aluminum complex soap base grease -X85: Fine-particle proof specification (MHL2-□Z only) -X86: With heavy duty scraper + Stable lubrication function (Lube-retainer) (Fluororubber seals) (MHL2-□Z only)	

# CONTENTS

# Wide Type Parallel Style Air Gripper MHL2 Series

How to Order	Page 3
Specifications	~
Model Selection	~
Construction	
Dimensions	Pages 8 to 13
Auto Switch Installation Examples and Mounting Positions	Pages 14, 15
Auto Switch Hysteresis	Page 15
Prior to Use Auto Switch Connections and Examples	
Made to Order ·····	· ·
Specific Product Precautions	· ·
Safety Instructions	Back cover




# Wide Type Parallel Style Air Gripper

# MHL2 Series

Ø10, Ø16, Ø20, Ø25, Ø32, Ø40



#### **How to Order**

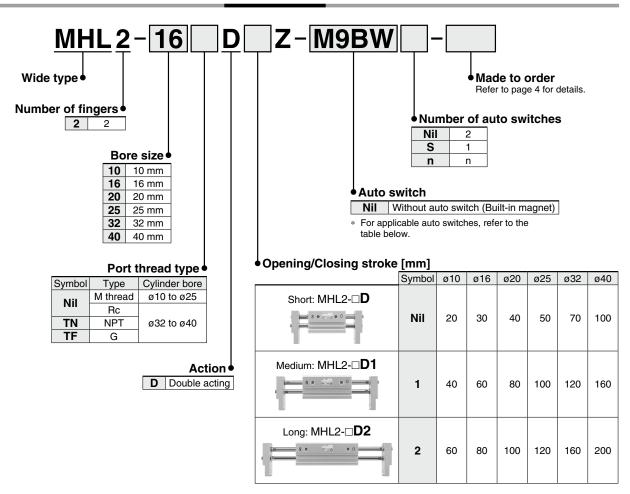

#### Applicable Auto Switches/Refer to the Web Catalog or Best Pneumatics for further information on auto switches.

	Applicable Auto Switches/heler to the web catalog of Best Pheumatics for further information on auto switches.																	
				ig.	) A /:	Load voltage		Auto swit	Lead wire length [m]*1				Pre-wired	Applicable				
1	Гуре	Special function	Electrical entry	Indicator light	Wiring (Output)		DC AC		Perpendicular	In-line	0.5 (Nil)	1 (M)	3 (L)	5 (Z)	connector		load	
					3-wire (NPN)		5 V. 12 V		M9NV	M9N	•	•	•	0	0	IC		
	등			3-wire (PNP)		12 V	5 V, 12 V	M9PV	M9P	•	•	•	0	0	circuit			
	switch			2-wire			M9BV	M9B	•	•	•	0	0	_				
	anto	Diagnostic			3-wire (NPN)	NP) 24 V 5 V, 12 V — M	M9NWV	M9NW	•	•	•	0	0	IC D				
		indication	Grommet	Yes	3-wire (PNP)		5 V, 12 V		_	M9PWV	M9PW	•	•	•	0	0	circuit	Relay, PLC
	state	(2-color indicator)			2-wire		12 V		M9BWV	M9BW	•	•	•	0	0	_		
		Water resistant (2-color indicator)				3-wire (PNP)	5 V. 12 V	M9NAV*2	M9NA*2	0	0	•	0	0	IC			
	Solid							3-wire (PNP)		5 V, 12 V		M9PAV*2	M9PA*2	0	0	•	0	0
					2-wire		12 V		M9BAV*2	M9BA*2	0	0	•	0	0	_		

- \*1 Lead wire length symbols: 0.5 m.....Nil (Example) M9NW
  - 1 m...... M (Example) M9NWM
  - 3 m..... L (Example) M9NWL
  - 5 m..... Z (Example) M9NWZ
- \*2 Water resistant type auto switches can be mounted on the above models, but SMC cannot guarantee water resistance.
- \* Solid state auto switches marked with "O" are produced upon receipt of order.
- \* When using the 2-color indicator type, please make the setting so that the indicator is lit in red to ensure the detection at the proper position of the air gripper.



#### Long stroke

One unit can handle workpieces with various diameters.


A large amount of gripping force is provided, through the use of a double piston mechanism, while maintaining a compact design.

Double-end type oil-impregnated resin bearings are used for all shafts.



#### **Symbol**

Double acting: Internal grip Double acting: External grip





#### Made to Order (For details, refer to pages 17 to 24.)

Symbol	Specifications
-X4	Heat resistant (-10 to 100°C)
-X5	Fluororubber seal
-X28	With bolt for adjusting the closing width
-X50	Without magnet
-X53	Ethylene propylene rubber seal (EPDM)
-X63	Fluorine grease
-X79	Grease for food processing machines: Fluorine grease
-X79A	Grease for food processing machines: Aluminum complex soap base grease
-X85	Fine-particle proof specification
-X86□	With heavy duty scraper + Stable lubrication function (Lube-retainer) (Seal material: NBR, Fluororubber)

Refer to pages 14 and 15 for cylinders with auto switches.

- Auto Switch Installation Examples and Mounting Positions
- Auto Switch Hysteresis

#### **Specifications**


Bore size [mm]	10	16	20	25	32	40	
Fluid	Air						
Action	Double acting						
Operating pressure [MPa]	0.15 to 0.6			0.1 to 0.6			
Ambient and fluid temperatures	−10 to 60°C (No freezing)						
Repeatability	±0.1						
Lubricant			Non-	-lube			
Effective gripping force [N]*1 at 0.5 MPa	14	45	74	131	228	396	

<sup>\*1</sup> Gripping point distance = Bore size 10, 16, 20, 25: 40 mm, Bore size 32, 40: 80 mm

#### Model/Stroke

Model	Bore size [mm]	Max. operating frequency [c.p.m]	Opening/Closing stroke [mm] ( <b>L2-L1</b> )	Closing width [mm] ( <b>L</b> 1)	Opening width [mm] ( <b>L</b> 2)	Weight [g]
MHL2-10DZ		60	20	56	76	280
MHL2-10D1Z	10	40	40	78	118	355
MHL2-10D2Z		40	60	96	156	430
MHL2-16DZ		60	30	68	98	525
MHL2-16D1Z	16	40	60	110	170	725
MHL2-16D2Z		40	80	130	210	845
MHL2-20DZ	20	60	40	82	122	940
MHL2-20D1Z		40	80	142	222	1335
MHL2-20D2Z		40	100	162	262	1520
MHL2-25DZ		60	50	100	150	1565
MHL2-25D1Z	25	40	100	182	282	2295
MHL2-25D2Z		40	120	200	320	2525
MHL2-32DZ		30	70	150	220	2875
MHL2-32D1Z	32	20	120	198	318	3770
MHL2-32D2Z		20	160	242	402	4585
MHL2-40DZ		30	100	188	288	5230
MHL2-40D1Z	40	20	160	246	406	6760
MHL2-40D2Z		20	200	286	486	7825

st The opening and closing widths represent the value when gripping the exterior of a workpiece.

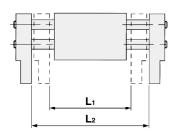

# **△Specific Product Precautions**

Be sure to read this before handling the products. Refer to page 25 for details.



#### **Model Selection**



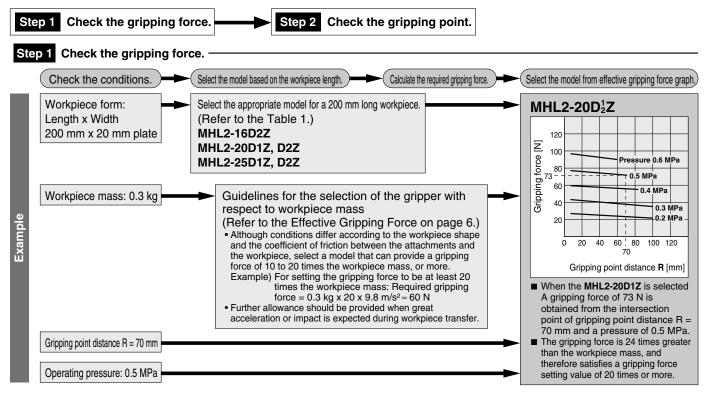


Table 1

Model	Bore size [mm]	Closing width [mm] ( <b>L</b> 1)	Opening width [mm] ( <b>L</b> 2)	Model	Bore size [mm]	Closing width [mm] ( <b>L</b> 1)	Opening width [mm] ( <b>L</b> 2)
MHL2-10DZ		56	76	MHL2-25DZ		100	150
MHL2-10D1Z	10	78	118	MHL2-25D1Z	25	182	282
MHL2-10D2Z		96	156	MHL2-25D2Z		200	320
MHL2-16DZ		68	98	MHL2-32DZ		150	220
MHL2-16D1Z	16	110	170	MHL2-32D1Z	32	198	318
MHL2-16D2Z		130	210	MHL2-32D2Z		242	402
MHL2-20DZ		82	122	MHL2-40DZ		188	288
MHL2-20D1Z	20	142	222	MHL2-40D1Z	40	246	406
MHL2-20D2Z		162	262	MHL2-40D2Z		286	486

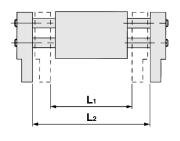

#### **Calculation of Required Gripping Force**

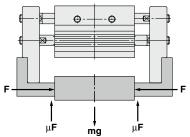

"Gripping force at least 10 to 20 times the workpiece weight"

The "10 to 20 times or more of the workpiece weight" recommended by SMC is calculated with a margin of "a" = 4, which allows for impacts that occur during normal transportation, etc.

damig normal transportation, etc.	
<b>When</b> $\mu$ <b>= 0.2</b>	When $\mu$ = 0.1
$F = \frac{mg}{2 \times 0.2} \times 4$	$F = \frac{mg}{2 \times 0.1} \times 4$
= 10 x mg	= 20 x mg
<b>A</b>	<b>^</b>
10 x Workpiece weight	20 x Workpiece weight

When gripping a workpiece as in the figure to the left, and with the following definitions,

- F: Gripping force [N]
- μ: Coefficient of friction between the attachments and the workpiece
- m: Workpiece mass [kg]
- g: Gravitational acceleration (= 9.8 m/s²)
- mg: Workpiece weight [N]

the conditions under which the workpiece will not drop are

 $\underline{\mathbf{2}}$  x  $\mu$ F > mg

Mumber of fingers

and therefore,

$$F > \frac{mg}{2 \times \mu}$$

With "a" representing the margin, "F" is determined by the following formula:

$$F = \frac{mg}{2 x \mu} x a$$

- Even in cases where the coefficient of friction is greater than  $\mu=0.2$ , for reasons of safety, select a gripping force which is at least 10 to 20 times greater than the workpiece weight, as recommended by SMC.
  - If high acceleration or impact forces are encountered during motion, a further margin should be considered.


<sup>\*</sup> The opening and closing widths represent the value when gripping the exterior of a workpiece.

#### **Effective Gripping Force**


#### Indication of effective gripping force

The gripping force shown in the tables represents the gripping force of one finger when all fingers and attachments are in contact with the workpiece.


F = One finger thrust




#### MHL2-10DZ

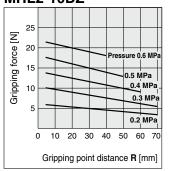


#### MHL2-10D<sub>2</sub><sup>1</sup>Z

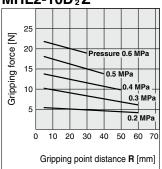


MHL2-16DZ

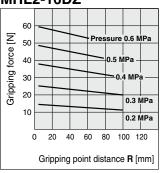


MHL2-16D<sub>2</sub><sup>1</sup>Z

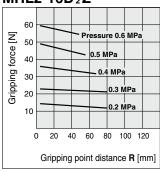


#### MHL2-20DZ

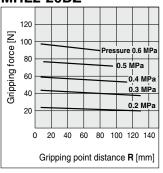


#### MHL2-20D<sub>2</sub><sup>1</sup>Z

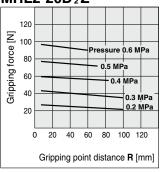


MHL2-25DZ

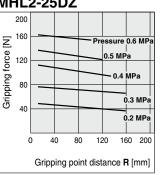


MHL2-25D<sub>2</sub>Z

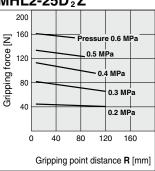


#### MHL2-32DZ

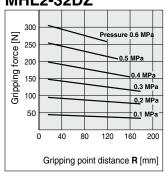


MHL2-32D<sub>2</sub> Z

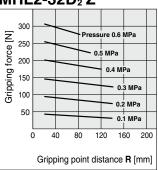

MHL2-40DZ

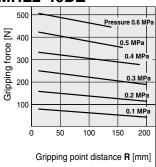



MHL2-40D<sub>2</sub> Z

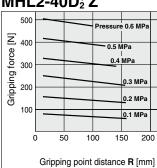

#### Step 2 Check the gripping point.

- The workpiece gripping point distance should be within the gripping force ranges given for each pressure in the effective gripping force graphs above.
- If operated with the workpiece gripping point beyond the indicated ranges, the load that will be applied to the fingers or the guide will become excessively unbalanced. As a result, the fingers could become loosened and adversely affect the service life of the unit.







R: Gripping point distance [mm]

#### Construction

ø10

#### Ø16 to Ø40

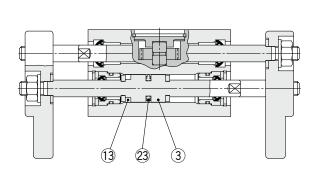

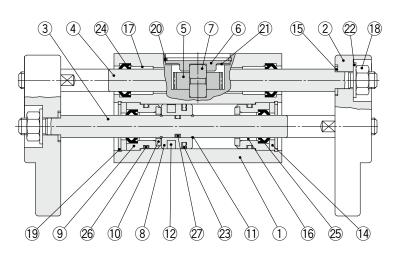

#### **Component Parts**

No.	Description	Material	Note
IVO.	•		
1	Body	Aluminum alloy	Hard anodized
2	Finger	Aluminum alloy	Hard anodized
3	Piston rod	Stainless steel	
4	Rack	Stainless steel	
5	Pinion	Carbon steel	
6	Pinion cover	Carbon steel	Electroless nickel plating
7	Pinion axis	Stainless steel	
8	Piston	Aluminum alloy	Hard anodized
9	Rod cover	Aluminum alloy	Trivalent chromated
10	Bumper	Urethane rubber	
11	Clip	Stainless steel spring wire	
12	Rubber magnet	Synthetic rubber	
13	Magnet	_	Nickel plating
14	Rod seal cover B	Cold rolled carbon steel sheet	Electroless nickel plating

No.	Description	Material	Note
15	Washer	Stainless steel	
16	Bearing	Oil containing polyacetal	
17	Bearing	Oil containing polyacetal	
18	U-nut	Carbon steel	Trivalent chromated
19	Inverted internal retaining ring	Carbon steel	Phosphate coating
20	C type retaining ring	Carbon steel	Phosphate coating
21	Wave washer	Steel for spring	Phosphate coating
22	Conical spring washer	Carbon steel	
23	Piston seal	NBR	
24	Rod seal	NBR	
25	Rod seal	NBR	
26	Gasket	NBR	
27	Gasket	NBR	

#### **Replacement Parts**

•	scription	MHL2-10□Z	MHL2-16□Z	MHL2-20□Z	MHL2-25□Z	MHL2-32□Z	MHL2-40□Z	Contents
Seal kit		MHL10-PS	MHL16-PS	MHL20-PS	MHL25-PS	MHL32-PS	MHL40-PS	23, 24, 25, 26, 27
Dieter	MHL2-□□DZ	MHL-AA1001	MHL-AA1601	MHL-AA2001	MHL-AA2501	MHL-AA3201	MHL-AA4001	ø10: 3, 10, 13, 23
Piston assembly	MHL2-□□D1Z	MHL-AA1002	MHL-AA1602	MHL-AA2002	MHL-AA2502	MHL-AA3202	MHL-AA4002	ø16 to ø40: 3, 8, 11, 12, 23,
	MHL2-□□D2Z	MHL-AA1003	MHL-AA1603	MHL-AA2003	MHL-AA2503	MHL-AA3203	MHL-AA4003	27
Rack	MHL2-□□DZ	MHL-AA1004	MHL-AA1604	MHL-AA2004	MHL-AA2504	MHL-AA3204	MHL-AA4004	
	MHL2-□□D1Z	MHL-AA1005	MHL-AA1605	MHL-AA2005	MHL-AA2505	MHL-AA3205	MHL-AA4005	4
	MHL2-□□D2Z	MHL-AA1006	MHL-AA1606	MHL-AA2006	MHL-AA2506	MHL-AA3206	MHL-AA4006	
Rod cover assembly		MHL-AA1007	MHL-AA1607	MHL-AA2007	MHL-AA2507	MHL-AA3207	MHL-AA4007	Ø10: 9, 14, 16, 19, 25, 26 Ø16 to Ø40: 9, 10, 14, 16, 19, 25, 26
Finger as	sembly	MHL-AA1008	MHL-AA1608	MHL-AA2008	MHL-AA2508	MHL-AA3208	MHL-AA4008	2, 15, 18, 22
Pinion assembly		MHL-AA1009	MHL-AA1609	MHL-AA2009	MHL-AA2509	MHL-AA3209	MHL-AA4009	5, 6, 7, 20, 21
Nut set	Nut set		MHL-A1617	MHL-A2017	MHL-A2517	MHL-A3217	MHL-A4017	15, 18, 22
U-nut ass	embly	MHL-A1017A	MHL-A1617A	MHL-A2017A	MHL-A2517A	MHL-A3217A	MHL-A4017A	18, 22


- \* Order one finger assembly, pinion assembly, nut set and U-nut assembly per unit.
- \* For piston assembly and rack, order 2 pieces per unit.
- \* For rod cover assembly, order 4 pieces per unit.
- \* The seal kit does not include a grease pack. Order it separately.


#### Replacement Parts/Grease Pack Part Nos.


<b>MHL2-</b> □□ <b>DZ</b> (Ø10 to Ø20)	GR-S-010 (10 g)
<b>MHL2-</b> □□ <b>DZ</b> (Ø25, Ø32)	GR-S-010 (10 g)
MHL2-□□DZ (Ø40)	GR-S-020 (20 g)
<b>MHL2-</b> □□ <b>D1Z</b> (Ø10, Ø16)	GR-S-010 (10 g)
<b>MHL2-</b> □□ <b>D1Z</b> (Ø20, Ø25)	GR-S-010 (10 g)
<b>MHL2-</b> □□ <b>D1Z</b> (Ø32, Ø40)	GR-S-020 (20 g)
<b>MHL2-</b> □□ <b>D2Z</b> (Ø10, Ø16)	GR-S-010 (10 g)
<b>MHL2-</b> □□ <b>D2Z</b> (Ø20, Ø25)	GR-S-010 (10 g)
<b>MHL2-</b> □□ <b>D2Z</b> (Ø32, Ø40)	GR-S-010 (10 g), GR-S-020 (20 g) (1 pack each)



# MHL2- $10D\Box z$

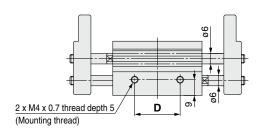

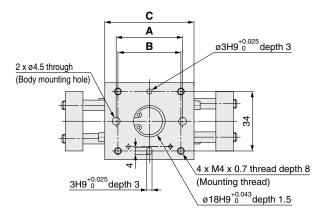




View K (Fingers closed)

\* The above figure shows the MHL2-10D1Z/10D2Z.



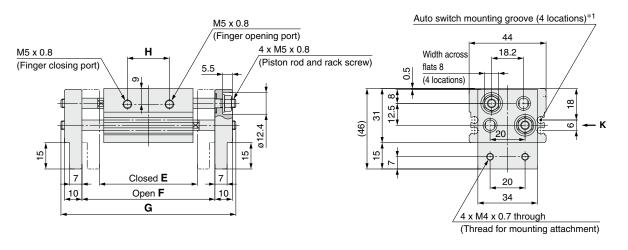


Model	Α	В	С	D	Е	F	G	Н	J
MHL2-10DZ	38	36	51	26	56	76	100	24	80
MHL2-10D1Z	54	52	67	42	78	118	142	39	108
MHL2-10D2Z	72	70	85	60	96	156	180	57	146


<sup>\*</sup> J-dimension is at fully closed.




D1Z is different from D2Z at finger closed because shaft is ejected from finger end.
 J-dimension is different from the value which is subtracted stroke from G-dimension.

# MHL2- $16D\Box z$

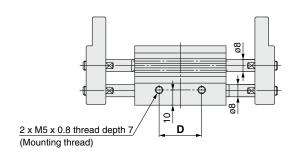

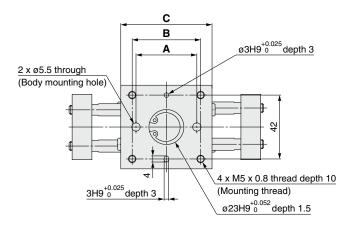




View K (Fingers closed)

\* The above figure shows the MHL2-16D1Z/16D2Z.



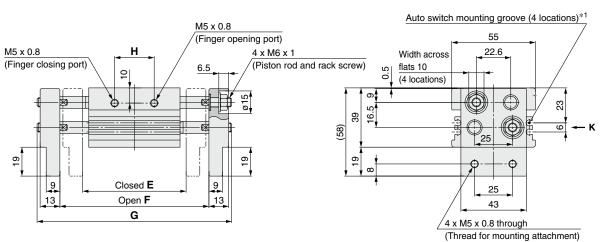


Model	Α	В	С	D	Е	F	G	Н	J
MHL2-16DZ	40	45	60	28	68	98	128	26	98
MHL2-16D1Z	70	75	90	58	110	170	200	50	152
MHL2-16D2Z	90	95	110	78	130	210	240	70	192


<sup>\*</sup> J-dimension is at fully closed.




<sup>\*</sup> D1Z is different from D2Z at finger closed because shaft is ejected from finger end. J-dimension is different from the value which is subtracted stroke from G-dimension.

# MHL2-**20**D□Z

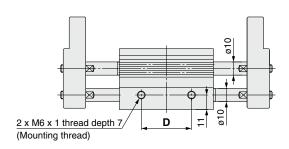

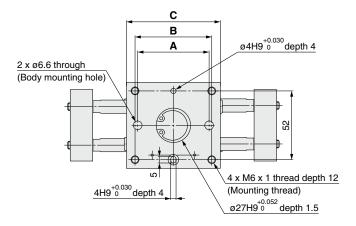


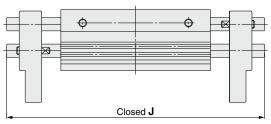

View K (Fingers closed)

\* The above figure shows the MHL2-20D1Z/20D2Z.



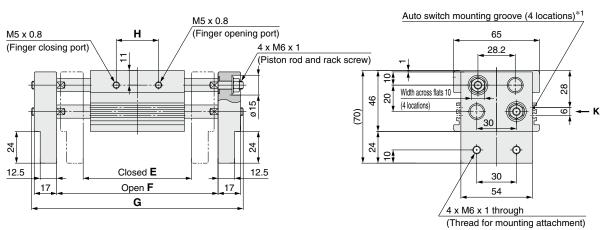

Model	Α	В	С	D	Е	F	G	Н	J
MHL2-20DZ	54	58	71	38	82	122	160	32	120
MHL2-20D1Z	96	100	113	80	142	222	260	68	195
MHL2-20D2Z	116	120	133	100	162	262	300	88	235


<sup>\*</sup> J-dimension is at fully closed.




D1Z is different from D2Z at finger closed because shaft is ejected from finger end.
 J-dimension is different from the value which is subtracted stroke from G-dimension.

#### **Dimensions**


# MHL2-**25**D□Z

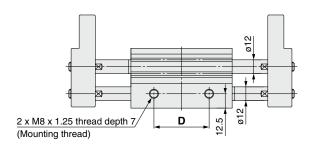

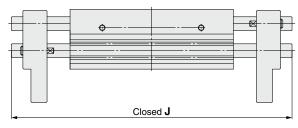


#### View K (Fingers closed)

\* The above figure shows the MHL2-25D1Z/25D2Z.

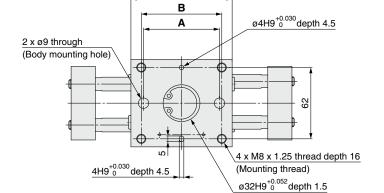

С



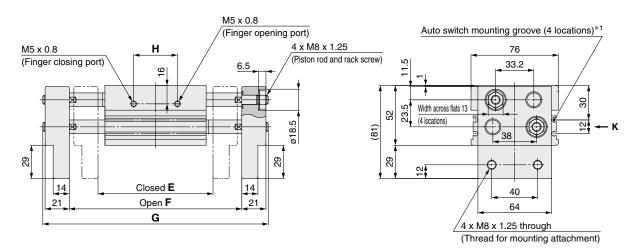


Model	Α	В	С	D	E	F	G	Н	J
MHL2-25DZ	66	70	88	48	100	150	196	38	146
MHL2-25D1Z	120	124	142	102	182	282	328	86	244
MHL2-25D2Z	138	142	160	120	200	320	366	104	282


<sup>\*</sup> J-dimension is at fully closed.



D1Z is different from D2Z at finger closed because shaft is ejected from finger end. J-dimension is different from the value which is subtracted stroke from G-dimension.

# $MHL2-32D\square Z$

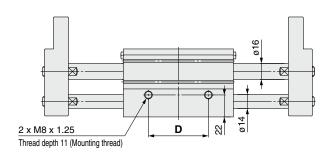


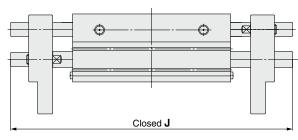


#### View K (Fingers closed)

\* The above figure shows the MHL2-32D1Z/32D2Z.



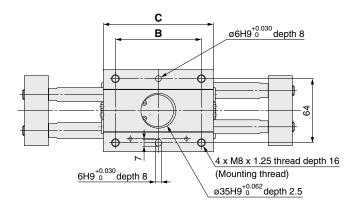

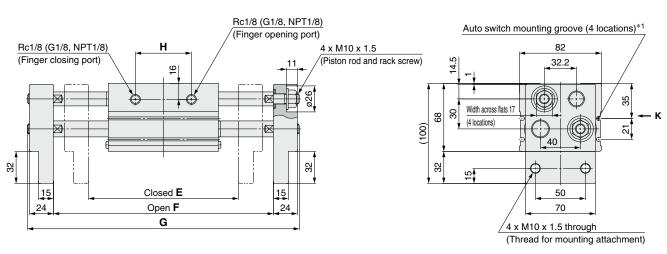

Model	В	С	D	Е	F	G	Н	J
MHL2-32DZ	86	110	60	150	220	272	56	202
MHL2-32D1Z	134	158	108	198	318	370	104	282
MHL2-32D2Z	178	202	152	242	402	454	148	366

<sup>\*</sup> J-dimension is at fully closed.





D1Z is different from D2Z at finger closed because shaft is ejected from finger end.

 $<sup>\</sup>mbox{\it J-dimension}$  is different from the value which is subtracted stroke from  $\mbox{\it G-dimension}.$ 

#### **Dimensions**

# $MHL2-40D\square Z$

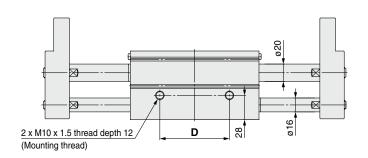

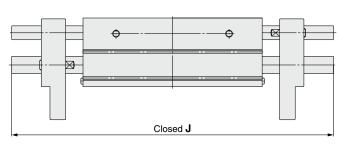


# 6H9<sup>+0.030</sup>/<sub>0</sub> depth 8 C B 4 x M10 x 1.5 thread depth 20 (Mounting thread) (Mounting thread) (940H9<sup>+0.062</sup>/<sub>0</sub> depth 2.5

#### View K (Fingers closed)

\* The above figure shows the MHL2-40D1Z/40D2Z.



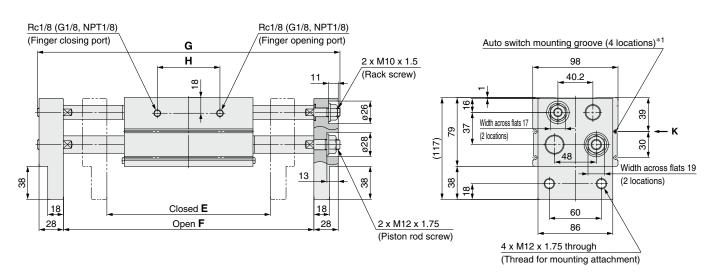

Model	В	С	D	Е	F	G	Н	J
MHL2-40DZ	116	148	80	188	288	348	72	252
MHL2-40D1Z	174	206	138	246	406	466	130	370
MHL2-40D2Z	214	246	178	286	486	546	170	450

J-dimension is at fully closed.



D1Z is different from D2Z at finger closed because shaft is ejected from finger end.

J-dimension is different from the value which is subtracted stroke from G-dimension.

# **Auto Switch Installation Examples and Mounting Positions**

Various auto switch applications are possible through different combinations of auto switch quantities and detecting positions.

#### 1) Detection when Gripping Exterior of Workpiece

i) Detection when a	ripping Exterior or work	picoc	
Detection example	① Confirmation of fingers in reset position	② Confirmation of workpiece held	③ Confirmation of workpiece released
Position to be detected	Position of fingers fully open	Position when gripping a workpiece	Position of fingers fully closed
Operation of auto switch	When fingers return: Auto switch to turn ON (Light ON)	When gripping a workpiece: Auto switch to turn ON (Light ON)	When a workpiece is not held (Abnormal operation): Auto switch to turn ON (Light ON)
One auto switch  One position, any of ①, ② and ③ can be detected.  Two auto switches  Two auto switches ② and ③ can be detected.  B C	•	•	•
[	•	•	_
Two auto switches  * Two positions of ①, ② and ③ can be detected  detected	_	•	•
② and ③ can be detected.	•	_	•
How to determine auto switch installation position	Step 1) Fully open the fingers.	Step 1) Position fingers for gripping a workpiece.	Step 1) Fully close the fingers.
At no pressure or low pressure, connect the auto switch to a power	Step 2) Insert the auto switch into the mounting groove from the direction of		
supply, and follow the directions.	Step 3) Slide the auto switch in the direction of the arrow until the indicator light illuminates and fasten it at a position 0.3 to 0.5 mm in the direction of the arrow beyond the position where the indicator light illuminates.  Position where light turns ON  Position to be secured  0.3 to 0.5 mm	Step 3) Slide the auto switch in the direction of the arrow until the indicator light illuminates.  Step 5) Slide the auto switch in the o 0.3 to 0.5 mm beyond the position where light turns ON  Position to be secured	Step 4) Slide the auto switch further in the direction of the arrow until the indicator light goes out.  pposite direction and fasten it at a position ere the indicator light illuminates.

- It is recommended that gripping of a workpiece be performed close to the center of the finger stroke.
- When holding a workpiece close at the end of opening/closing stroke of fingers, detecting performance of the combinations listed in the above table may be limited, depending on the hysteresis of an auto switch, etc.



# **Auto Switch Installation Examples** and Mounting Positions

Various auto switch applications are possible through different combinations of auto switch quantities and detecting positions.


#### 2) Detection when Gripping Interior of Workpiece

2,0	etection when a	ripping interior or work				
[	Detection example	Confirmation of fingers in reset position	② Confirmation of workpiece held	3 Confirmation of workpiece released		
Po	sition to be detected	Position of fingers fully closed	Position when gripping a workpiece	Position of fingers fully open		
Оре	eration of auto switch	When fingers return: Auto switch to turn ON (Light ON)	When gripping a workpiece: Auto switch to turn ON (Light ON)	When a workpiece is not held (Abnormal operation): Auto switch to turn ON (Light ON)		
atio	One auto switch One position, any of ①, ② and ③ can be detected.	•	•	•		
g   T/	wo auto switches 💆 A	•	•	_		
* gi	wo auto switches Two positions of ①, ② and ③ can be detected  B  C	_	•	•		
Sete	2 and 3 can be detected.	•	_	•		
	How to determine auto switch nstallation position	Step 1) Fully close the fingers.	Step 1) Position fingers for gripping a workpiece.	Step 1) Fully open the fingers.		
pr au	no pressure or low essure, connect the uto switch to a power	Step 2) Insert the auto switch into the mounting groove from the direction of		<b>→</b>		
	ipply, and follow the rections.	Step 3) Slide the auto switch in the direction of the arrow until the indicator light illuminates.		irection of the arrow until the indicator light 0.3 to 0.5 mm in the direction of the arrow or light illuminates.		
		Step 4) Slide the auto switch further in the direction of the arrow until the indicator light goes out.	light turns ON			
		Step 5) Slide the auto switch in the opposite direction and fasten it at a position 0.3 to 0.5 mm beyond the position where the indicator light illuminates.		0.3 to 0.5 mm		
		Position where light turns ON 0.3 to 0.5 mm  Position to be secured	Position to be secured	ф ф ⊠		
		Position where light turns ON 0.3 to 0.5 mm		ф ф ) (6 20 1		

- It is recommended that gripping of a workpiece be performed close to the center of the finger stroke.
   When holding a workpiece close at the end of opening/closing stroke of fingers, detecting performance of the combinations listed in the above table may be limited, depending on the hysteresis of an auto switch, etc.

#### Auto Switch Hysteresis

The auto switch hysteresis is shown in the table. Refer to the table as a guide when setting auto switch positions.

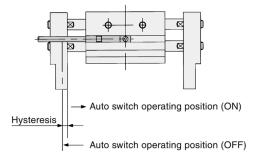

	[mm]
Auto switch model Air gripper model	D-M9□(V) D-M9□W(V) D-M9□A(V)
MHL2-10D□Z	0.2
MHL2-16D□Z	0.5
MHL2-20D□Z	0.4
MHL2-25D□Z	0.4
MHL2-32D□Z	0.9
MHL2-40D□Z	0.7




# **Prior to Use Auto Switch Connections and Examples**

#### Sink Input Specifications


#### **Source Input Specifications**


#### 3-wire, NPN



# 3-wire, PNP Brown Input Auto switch Black Blue COM (PLC internal circuit)

#### 2-wire






Connect according to the applicable PLC input specifications, as the connection method will vary depending on the PLC input specifications.


#### **Examples of AND (Series) and OR (Parallel) Connections**

\* When using solid state auto switches, ensure the application is set up so the signals for the first 50 ms are invalid. Depending on the operating environment, the product may not operate properly.


# 3-wire AND connection for NPN output (Using relays)

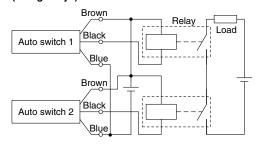


#### (Performed with auto switches only)

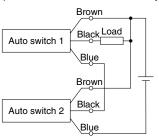


#### 3-wire OR connection for NPN output

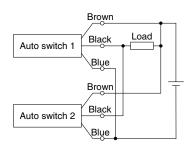


# 3-wire AND connection for PNP output (Using relays)

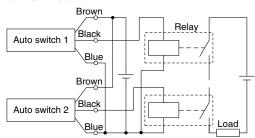


#### (Performed with auto switches only)

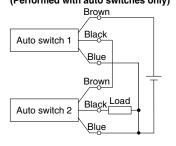

#### 3-wire OR connection for PNP output

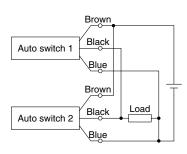

#### 2-wire AND connection

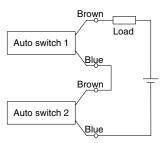

When two auto switches are connected in series, a load may malfunction because the load voltage will decline when in the ON state.

when in the ON state.
The indicator lights will light up when both of the auto switches are in the ON state.
Auto switches with a load voltage less than 20 V cannot be used.

Load voltage at ON = Power supply voltage – Residual voltage x 2 pcs.


= 24 V - 4 V x 2 pcs.

= 16 V

Example: Power supply is 24 VDC

Internal voltage drop in auto switch is 4 V.

#### 2-wire OR connection

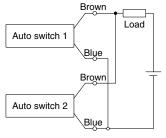

(Solid state)
When two auto
switches are
connected in parallel,
malfunction may occur
because the load
voltage will increase
when in the OFF state.

Load voltage at OFF = Leakage current x 2 pcs. x Load impedance = 1 mA x 2 pcs. x 3 k $\Omega$ 

Example: Load impedance is 3  $k\Omega$ .

Leakage current from auto switch is 1 mA.

#### (Reed)

Because there is no current leakage, the load voltage will not increase when turned OFF. However, depending on the number of auto switches in the ON state, the indicator lights may sometimes grow dim or not light up, due to the dispersion and reduction of the current flowing to the auto switches.



# **Made to Order**



1 -X4	Heat Resistant (-10 to 100°C)	· Page 18
2 -X5	Fluororubber Seal ·····	Page 18
3 -X28	With Bolt for Adjusting the Closing Width	Page 19
4 -X50	Without Magnet ·····	Page 19
5 -X53	Ethylene Propylene Rubber Seal (EPDM)	Page 19
6 -X63	Fluorine Grease	Page 20
7 -X79	Grease for Food Processing Machines: Fluorine Grease	· Page 20
8 -X79A	Grease for Food Processing Machines: Aluminum Complex Soap Base Grease	· Page 21
9 -X85	Fine-particle Proof Specification	Page 21
10 -X86□	With Heavy Duty Scraper + Stable Lubrication Function (Lube-retainer) (Seal Material: NBR Fluororubber)	· Page 23




1 Heat Resistant (-10 to 100°C)

Symbol -X4

Seal material and grease have been changed so that the product can be used at temperatures between -10 up to 100°C.

#### **How to Order**



#### Magnet is built-in, but when using an auto switch, the acceptable temperature range becomes -10 to 60°C.

\* For lubrication, specialized grease GR-F is recommended.

#### **Specifications**

Ambient temperature range	-10°C to 100°C (No freezing)
Seal material	Fluororubber
Grease	Heat-resistant grease (GR-F)
Specifications/dimensions other than the above	Same as the standard type

#### Replacement Parts: Seal Kit

Seal kit part number	
MHL□□-PS-X4	

- \* Enter the cylinder bore size into □□ of the seal kit part number. Refer to page 7 for the replacement parts.
- \* The seal kit does not include a grease pack. Order it separately. Grease pack part number: GR-F-005 (5 g)

### **⚠** Warning


#### **Precautions**

Be aware that smoking cigarettes after your hands have come into contact with the grease used for this product can create a gas that is hazardous to humans.

## 2 Fluororubber Seal

Symbol -X5

#### **How to Order**



### Specifications

Seal material	Fluororubber			
Specifications/dimensions other than the above	Same as the standard type			

- Please contact SMC, since the type of chemical and the operating temperature may not allow the use of this product.
- \* Since the standard type magnet is built-in, please contact SMC for the product's adaptability to the operating environment.


# 3 With Bolt for Adjusting the Closing Width

Symbol

-X28

Finger closing stroke can be fine-tuned by an adjustment bolt.

#### **How to Order**




#### **Specifications**

Adjustment range/ Adjustment bolt position	Refer to the dimensions below.			
Specifications other than the above	Same as the standard type			
Dimensions	Refer to the dimensions below.			

- \* Please contact SMC for ø40.
- The bumper at the end of the adjustment bolt is not heat resistant. Combination with high temperature type is only available with a metal stopper.

**Dimensions** (The dimensions other than specified below are the same as the standard type.)

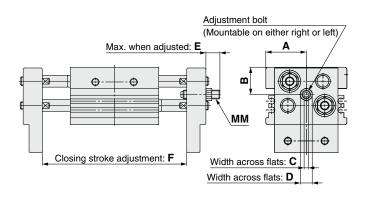


							[mm]			
Model	Α	В	С	D	Е	F	MM			
MHL2-10DZ-X28					4	2				
MHL2-10D1Z-X28	22	15.5	2.5	7	11	16	M5 x 0.8			
MHL2-10D2Z-X28					11	16				
MHL2-16DZ-X28					9.5	9				
MHL2-16D1Z-X28	27.5	18.5	3	8	13.5	20	M6 x 1			
MHL2-16D2Z-X28					13.5	20				
MHL2-20DZ-X28					7.5	7				
MHL2-20D1Z-X28	32.5	21	4	12	8.5	9	M8 x 1			
MHL2-20D2Z-X28					8.5	9				
MHL2-25DZ-X28				14	7.5	7	M10 x 1			
MHL2-25D1Z-X28	38	26	5	17	15	18	M40 4 5			
MHL2-25D2Z-X28				17	15	18	M10 x 1.5			
MHL2-32DZ-X28					32.5					
MHL2-32D1Z-X28	41	32	6	6 19		19	19	32.5	51	M12 x 1.75
MHL2-32D2Z-X28					32.5					

# 4 Without Magnet

Symbol

-X50

#### **How to Order**



#### **Specifications**

Magnet	None			
Specifications/dimensions other than the above	Same as the standard type			


## 5 Ethylene Propylene Rubber Seal (EPDM)

Symbol

-X53

Seal material has been changed to ethylene propylene (EPDM), and grease to fluorine grease.

#### **How to Order**



For lubrication, specialized grease GR-F is recommended.
 Grease pack part number: GR-F-005 (5 g)

#### **Specifications**

Seal material	Ethylene propylene rubber (EPDM)
Grease	Fluorine grease (GR-F)
Specifications/dimensions other than the above	Same as the standard type

#### **⚠** Warning

#### **Precautions**

Be aware that smoking cigarettes after your hands have come into contact with the grease used for this product can create a gas that is hazardous to humans.



**6** Fluorine Grease

-X63

#### **How to Order**

Standard model no. - X63

\* For lubrication, specialized grease GR-F is recommended. **Grease pack part number: GR-F-005** (5 g)

#### **⚠** Warning

#### **Precautions**

Be aware that smoking cigarettes after your hands have come into contact with the grease used for this product can create a gas that is hazardous to humans.

#### **Specifications**

Grease	Fluorine grease (GR-F)			
Specifications/dimensions other than the above	Same as the standard type			

**Symbol** 

-X79

#### **Grease for Food Processing Machines: Fluorine Grease**

Use grease for food processing machines (NSF-H1 certified/fluorine grease).

#### **How to Order**

Standard model no. – X79

Grease for food processing machines: Fluorine grease

## **⚠** Warning

#### **Precautions**

Be aware that smoking cigarettes after your hands have come into contact with the grease used for this product can create a gas that is hazardous to humans.

For lubrication, specialized grease GR-H is recommended.
 Grease pack part number: GR-H-010 (10 g)

#### **Specifications**

Grease	Grease for food processing machines (NSF-H1 certified)/Fluorine grease
Specifications/dimensions other than the above	Same as the standard type

\* If the fluorine grease is not applicable to the working environment, use "-X79A."

## **⚠** Caution

#### Do not use air grippers in a food-related environment.


<Not installable>

Food zone ..... Food may directly contact with air grippers, and is treated as food products.

<Installable>

Splash zone ······· Food may directly contact with air grippers, but is not treated as food products.

Non-food zone ····· Air grippers do not directly contact food.

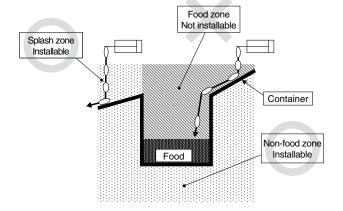



# 8 Grease for Food Processing Machines: Aluminum Complex Soap Base Grease

Symbol -X79A

Use grease for food processing machines (NSF-H1 certified).

#### **How to Order**

Standard model no. – X79A

Grease for food processing machines: • Aluminum complex soap base grease

### **⚠** Caution

#### Do not use air grippers in a food-related environment.

<Not installable>

Food zone ...... Food may directly contact with air grippers,

and is treated as food products.

<Installable>

Splash zone ...... Food may directly contact with air grippers,


but is not treated as food products.

Non-food zone ····· Air grippers do not directly contact food.

For lubrication, specialized grease GR-R is recommended.
 Grease pack part number: GR-R-010 (10 g)

#### **Specifications**

Grease	Grease for food processing machines (NSF-H1 certified)/Aluminum complex soap base grease
Specifications/dimensions other than the above	Same as the standard type

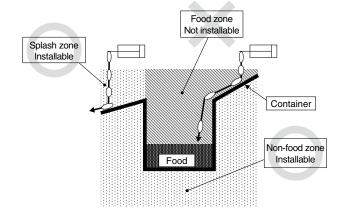

# 9 Fine-particle Proof Specification


Symbol -X85

Applicable for environments with flying micro-powder (10 to 100  $\mu$ m) such as ceramic powder, toner powder, paper powder, and metallic powder (excluding weld spatter)

A grease film is formed on the rod by the Lube-retainer which maintains lubrication for longer increasing gripper endurance.

X85

#### **How to Order**

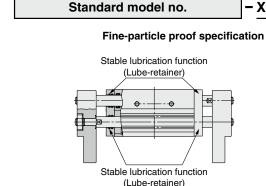

#### **Specifications**


-poomounom						
Bore size [mm]	10	16	20	25	32	40
Dust prevention method	Stable lubrication function (Lube-retainer) type (8 locations)					
Operating pressure [MPa]	0.4 to 0.6 0.3 to 0.6					
Repeatability	±0.1					
Effective gripping force [N]*1 at 0.5 MPa	14	45	74	131	228	396

\*1 Gripping point distance: 40 mm

Specifications other than the above	Same as the standard type
Dimensions	Refer to the dimensions on page 23.

#### **Gripping Point**

- The workpiece gripping point distance should be within the gripping force ranges given for each pressure in the effective gripping force graphs on the next page.
- If operated with the workpiece gripping point beyond the indicated ranges, the load that will be applied to the fingers or the guide will become excessively unbalanced. As a result, the fingers could become loosened and adversely affect the service life of the unit.

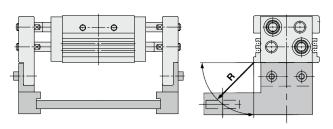

R: Gripping point distance [mm]




Symbol -X85

#### **Effective Gripping Force**


#### • Indication of effective gripping force

The gripping force shown in the tables represents the gripping force of one finger when all fingers and attachments are in contact with the workpiece.


**F** = One finger thrust




#### MHL2-10DZ-X85

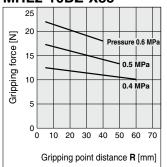


#### MHL2-10D<sub>2</sub><sup>1</sup>Z-X85

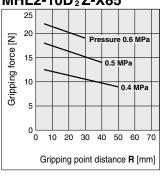


#### MHL2-16DZ-X85

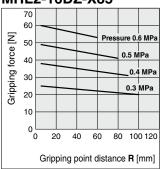


#### MHL2-16D 12-X85

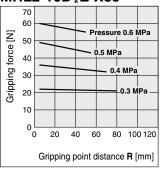


#### MHL2-20DZ-X85

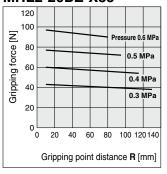


#### MHL2-20D<sub>2</sub><sup>1</sup>Z-X85

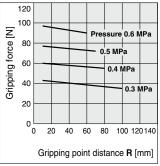


#### MHL2-25DZ-X85

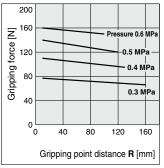


MHL2-25D 1 Z-X85

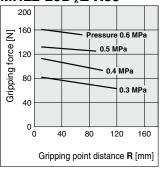


#### MHL2-32DZ-X85

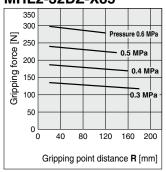


MHL2-32D<sub>2</sub><sup>1</sup>Z-X85

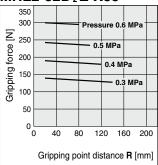

MHL2-40DZ-X85

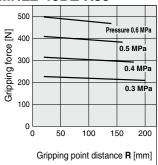


MHL2-40D<sub>2</sub><sup>1</sup>Z-X85

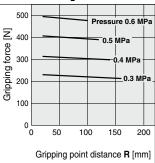

# 9 Fine-particle Proof Specification

Symbol -X85

**Dimensions** (The dimensions other than specified below are the same as the standard type.)

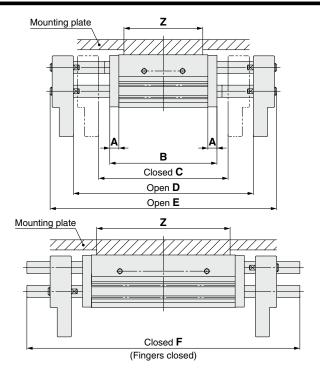

								[mm]
Model	A	В	С	D	E	F	z	Weight [g]
MHL2-10DZ-X85	8	67	88	108	132	112	49	350
MHL2-10D1Z-X85	8	83	104	144	168	131	65	420
MHL2-10D2Z-X85	8	101	122	182	206	169	83	495
MHL2-16DZ-X85	9.5	79	96	126	156	126	58	650
MHL2-16D1Z-X85	9.5	109	126	186	216	179	88	840
MHL2-16D2Z-X85	9.5	129	146	226	256	219	108	965
MHL2-20DZ-X85	9	89	108	148	186	146	69	1115
MHL2-20D1Z-X85	9	131	150	230	268	221	111	1490
MHL2-20D2Z-X85	9	151	170	270	308	261	131	1675
MHL2-25DZ-X85	9	106	128	178	224	174	86	1815
MHL2-25D1Z-X85	9	160	182	282	328	270	140	2500
MHL2-25D2Z-X85	9	178	200	320	366	308	158	2730
MHL2-32DZ-X85	11.5	133	161	231	283	213	108	3255
MHL2-32D1Z-X85	11.5	181	209	329	381	311	156	4145
MHL2-32D2Z-X85	11.5	225	253	413	465	395	200	4960
MHL2-40DZ-X85	10	168	198	298	358	278	146	5685
MHL2-40D1Z-X85	10	226	256	416	476	396	204	7220
MHL2-40D2Z-X85	10	266	296	496	556	476	244	8270

\* The customer's mounting plate should be attached with the Z-dimension.


# 10 With Heavy Duty Scraper + Stable Lubrication Function (Lube-retainer) (Seal Material: NBR, Fluororubber)

Symbol

-X86□


- The cylinders are suitable for use in environments with significant amounts of dust with the heavy duty scraper on the wiper ring. In addition, the Lube-retainer creates a grease coating around the rod, which improves lubrication.
- Seal material can be NBR or fluororubber.

#### **How to Order**





With heavy duty scraper + Stable lubrication (function (Fluororubber seals)

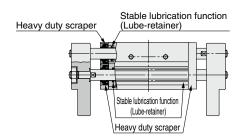

#### **Specifications**

Symbol	-X86			-X86A			
Bore size [mm]	25	32	40	25	32	40	
Dust prevention method	Heavy duty scraper + Stable lubrication						
Dust prevention method	function (Lube-retainer) type (8 locations)						
Heavy duty scraper material	NBR Fluororubber				er		
Operating pressure [MPa]	0.3 to 0.6						
Repeatability	±0.1						
Effective gripping force [N]*1 at 0.5 MPa	131	228	396	131	228	396	

- \*1 Gripping point distance: 40 mm
- \* For water resistant type, please contact SMC local sales representative.

Specifications other than the above	Same as the standard type
Dimensions	Refer to the dimensions on page 24.



**Symbol** 

-X86□


# 10 With Heavy Duty Scraper + Stable Lubrication Function (Lube-retainer) (Seal Material: NBR, Fluororubber)

#### **Effective Gripping Force**


#### • Indication of effective gripping force

The gripping force shown in the tables represents the gripping force of one finger when all fingers and attachments are in contact with the workpiece.


F = One finger thrust




#### MHL2-25DZ-X86/X86A

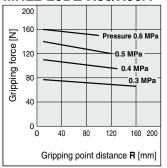


#### MHL2-25D<sub>2</sub><sup>1</sup>Z-X86/X86A

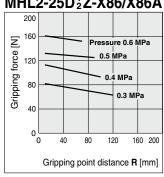


#### MHL2-32DZ-X86/X86A

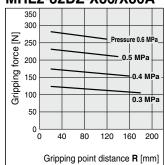


#### MHL2-32D<sub>2</sub><sup>1</sup>Z-X86/X86A

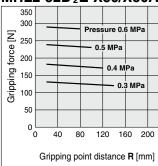


#### MHL2-40DZ-X86/X86A

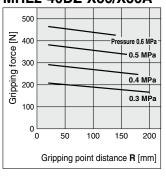


MHL2-40D<sub>2</sub>Z-X86/X86A

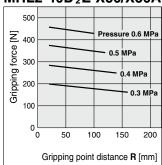

#### **Dimensions** (The dimensions other than specified below are the same as the standard type.)

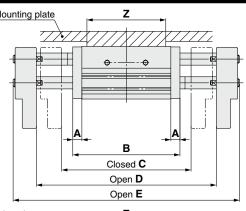

								[mm]
Model	A	В	С	D	E	F	Z	Weight [g]
MHL2-25DZ-X86(A)	9	106	128	178	224	174	86	1835
MHL2-25D1Z-X86(A)	9	160	182	282	328	270	140	2520
MHL2-25D2Z-X86(A)	9	178	200	320	366	308	158	2750
MHL2-32DZ-X86(A)	11.5	133	161	231	283	213	108	3250
MHL2-32D1Z-X86(A)	11.5	181	209	329	381	311	156	4150
MHL2-32D2Z-X86(A)	11.5	225	253	413	465	395	200	4960
MHL2-40DZ-X86(A)	10	168	198	298	358	278	146	5765
MHL2-40D1Z-X86(A)	10	226	256	416	476	396	204	7295
MHL2-40D2Z-X86(A)	10	266	296	496	556	476	244	8340

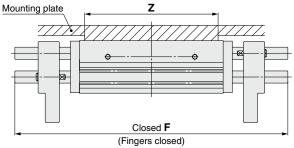

<sup>\*</sup> The customer's mounting plate should be attached with the Z-dimension.





# MHL2 Series Specific Product Precautions

Be sure to read this before handling the products. Refer to the back cover for safety instructions. For air gripper and auto switch precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smcworld.com

Design

## **△Warning**


If a workpiece is hooked onto the attachment, make sure that excessive impact will not be created at the start and the end of the movement. Failure to observe this precaution may result in shifting or dropping the workpiece, which could be dangerous.

#### **How to Mount Air Grippers**

Possible to mount from 2 directions


#### **Axial Mounting**

#### Body tapped




Model	Applicable bolt	Max. tightening torque [N·m]	Max. screw-in depth L [mm]	
MHL2-10D□Z	M4 x 0.7	2.1	8	
MHL2-16D□Z	M5 x 0.8	4.3	10	
MHL2-20D□Z	M6 x 1	7.3	12	
MHL2-25D□Z	M8 x 1.25	17.7	16	
MHL2-32D□Z	M8 x 1.25	18	16	
MHL2-40D□Z	M10 x 1.5	36	20	

#### Body through-hole

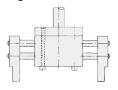

Model	Applicable bolt	Max. tightening torque [N·m]		
MHL2-10D□Z	M4 x 0.7	2.1		
MHL2-16D□Z	M5 x 0.8	4.3		
MHL2-20D□Z	M6 x 1	7.3		
MHL2-25D□Z	M8 x 1.25	17.7		

#### **Lateral Mounting**




Model	Applicable bolt		Max. screw-in depth L [mm]	
MHL2-10D□Z	M4 x 0.7	1.4	5	
MHL2-16D□Z	M5 x 0.8	2.8	7	
MHL2-20D□Z M6 x 1		4.8	7	
MHL2-25D□Z	M8 x 1.25	12.0	7	
MHL2-32D□Z	M8 x 1.25	12.0	11	
MHL2-40D□Z	M10 x 1.5	24.0	12	

#### **How to Mount Attachments to the Finger**

- Make sure that the piston rod is retracted so as to avoid twisting the piston rod when mounting an attachment to the finger.
- Do not scratch or dent the sliding parts of the piston rod. Damage to the bearings or seals may cause air leaks or faulty operation.
- Refer to the table on the right for the proper tightening torque on the bolt used for securing the attachment to the finger.

Model	Applicable bolt	Max. tightening torque [N·m]	
MHL2-10D□Z	M4 x 0.7	1.4	
MHL2-16D□Z	M5 x 0.8	2.8	
MHL2-20D□Z	M6 x 1	4.8	
MHL2-25D□Z	M8 x 1.25	12.0	
MHL2-32D□Z	M10 x 1.5	24.0	
MHL2-40D□Z	M12 x 1.75	42.2	

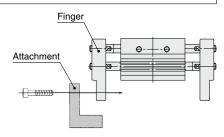

# **⚠** Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of "Caution," "Warning" or "Danger." They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC)\*1), and other safety regulations.

Caution: Caution indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury.

------

Warning: Warning indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.

⚠ Danger: Danger indicates a nazaru wiun a nigin level on the first avoided, will result in death or serious injury. **Danger** indicates a hazard with a high level of risk which, \*1) ISO 4414: Pneumatic fluid power - General rules relating to systems.

ISO 4413: Hydraulic fluid power – General rules relating to systems.

IEC 60204-1: Safety of machinery - Electrical equipment of machines. (Part 1: General requirements)

ISO 10218-1: Manipulating industrial robots - Safety.

#### **⚠Warning**

1. The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications.

Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously review all specifications of the product referring to its latest catalog information, with a view to giving due consideration to any possibility of equipment failure when configuring the equipment.

2. Only personnel with appropriate training should operate machinery and equipment.

The product specified here may become unsafe if handled incorrectly. The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.

- 3. Do not service or attempt to remove product and machinery/ equipment until safety is confirmed.
  - 1. The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed.
  - 2. When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.
  - 3. Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.
- 4. Contact SMC beforehand and take special consideration of safety measures if the product is to be used in any of the following conditions.
  - 1. Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.
  - 2. Installation on equipment in conjunction with atomic energy, railways, air navigation, space, shipping, vehicles, military, medical treatment, combustion and recreation, or equipment in contact with food and beverages, emergency stop circuits, clutch and brake circuits in press applications, safety equipment or other applications unsuitable for the standard specifications described in the product catalog.
  - 3. An application which could have negative effects on people, property, or animals requiring special safety analysis.
  - 4. Use in an interlock circuit, which requires the provision of double interlock for possible failure by using a mechanical protective function, and periodical checks to confirm proper operation.

#### **⚠** Caution

1. The product is provided for use in manufacturing industries.

The product herein described is basically provided for peaceful use in manufacturing industries.

If considering using the product in other industries, consult SMC beforehand and exchange specifications or a contract if necessary. If anything is unclear, contact your nearest sales branch.

#### Limited warranty and Disclaimer/ **Compliance Requirements**

The product used is subject to the following "Limited warranty and Disclaimer" and "Compliance Requirements".

Read and accept them before using the product.

#### **Limited warranty and Disclaimer**

- 1. The warranty period of the product is 1 year in service or 1.5 years after the product is delivered, whichever is first.\*2)
  - Also, the product may have specified durability, running distance or replacement parts. Please consult your nearest sales branch.
- 2. For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided. This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.
- 3. Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalog for the particular products.
  - 2) Vacuum pads are excluded from this 1 year warranty.

A vacuum pad is a consumable part, so it is warranted for a year after it is delivered.

Also, even within the warranty period, the wear of a product due to the use of the vacuum pad or failure due to the deterioration of rubber material are not covered by the limited warranty.

#### Compliance Requirements

- 1. The use of SMC products with production equipment for the manufacture of weapons of mass destruction (WMD) or any other weapon is strictly prohibited.
- 2. The exports of SMC products or technology from one country to another are governed by the relevant security laws and regulations of the countries involved in the transaction. Prior to the shipment of a SMC product to another country, assure that all local rules governing that export are known and followed.

#### **⚠** Caution

#### SMC products are not intended for use as instruments for legal metrology.

Measurement instruments that SMC manufactures or sells have not been qualified by type approval tests relevant to the metrology (measurement) laws of each country. Therefore, SMC products cannot be used for business or certification ordained by the metrology (measurement) laws of each country.

#### **Revision History**

- Edition B \* Bore sizes 32 and 40 mm have been added.
  - \* Number of pages has been increased from 24 to 28.

XR

↑ Safety Instructions Be sure to read the "Handling Precautions for SMC Products" (M-E03-3) and "Operation Manual" before use.