Flame Resistant (Equivalent to UL-94 Standard V-0) FR Double Layer Tubing


TRB Series



Suitable for air and water piping in environments where sparks from spot welders, etc., may be a problem.

Double layer design using flame resistant resin (equivalent to UL-94 Standard V-0) for outer layer.





Sectional view of FR double layer tubing


Model		TRB0604	TRB0806	TRB1075	TRB1209
Inner tubing O.D. (mm)		6	8	10	12
Inner tubing I.D. (mm)		4	6	7.5	9
Outer layer thickness (mm)		1	1	1	1
External layer color (epop)	Black (B)	<u> </u>	•	•	
	White (W)	<u> </u>	•	•	
	Red (R)	•	•	•	
	Blue (BU)	-	•	<u> </u>	-
	Yellow (Y)	<u> </u>	•	•	<u> </u>
	Green (G)	 	•	•	<u> </u>
Min. bending radius (mm)		15	28	35	45
				·	

Specifications


Fluiu			All/Water				
Max. operating pressure (MPa) 20°C 40°C 60°C		1.0	1.0	1.0	1.0		
		1.0	0.8	0.8	0.8		
		60°C	0.8	0.6	0.6	0.6	
Recommended fittings			FR One-touch fittings: KR-W2 series				
Ambient and fluid temperature			−20 to +60°C				
			(Water: 0 to 60°C) (No freezing)				
Material	Inner tub	oing	Nylon 12				
wateriai	Outer lav	/er	PVC (Equivalent to LIL-94 Standard V-0)				

Note) The color of all inner tubing is black.

Max. Operating Pressure

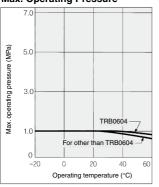

How to Order



Note) The color of the outer layer of all tubing is opaque.

Installation on One-touch Fittings

⚠ Caution

Length of tubing to be inserted into One-touch fittings is indicated on the outer layer of TRB tubing. Cut the tube according to this indication, (Step 1) and then strip off the outer layer (Step 2) for installing into fittings.





Cut internal and external layers



Strip off external layer only

⚠ Precautions

I Be sure to read this before handling the products.

Refer to back page 50 for Safety Instructions and pages 13 to 17 for Fittings and Tubing Precautions.

 Applicable for general industrial water. Please consult with SMC if using for the other kind of fluid. Also, the surge voltage pressure must be under the maximum operating pressure.

If the surge pressure exceeds the maximum operating pressure, it will result in damage to fittings and tubing

2. Abnormal temperature rise caused by adiabatic compression may result in the tube bursting.

KQ2

KQB2

KM

KF

M H/DL

L/LL KC

KK

KK130

DM KDM

KB

KR KA

KQG2

KG

KFG2

MS

KKA

KP LO

MQR

IDK