Oil Filter **FH150 Series**



Compact and lightweight

The compact and lightweight design employs an aluminum alloy cover.

Easy maintenance

The element slides into place, making it easy to install and remove.

Clogging sensor

The filter can be fitted with a differential pressure indicator (reset type) or differential pressure indication switch (visual combined, nonreset type).



Specifications

Fluid		Hydraulic fluid				
Operating pres	ssure	Max. 1 MPa				
Operating temperature		Max. 80°C				
	Cover	Aluminum die-cast				
Main material	Case	Steel plate				
	O-ring	NBR or FKM Note)				
	Material	Paper				
Element	Nominal filtration	5, 10, 20 μm				
	Differential pressure resistance	0.6 MPa				
	sure indicator operating pressure ment differential pressure)	0.13 MPa				

Note) The material of the O-rings and seals differs depending on the hydraulic fluid used. Petroleum, Water-glycol, Emulsion: NBR; Phosphoric ester: FKM

Model/Rated Flow Rate


wiodel/hated I low hate									
Model	Port size (Rc)	Rated flow rate (L/min)							
FH150-02	1/4	5							
FH150-03	3/8	10							
FH150-04	1/2	20							

HOW□

Accessory/Option

Description	Part no.	Note
Differential pressure indicator	CB-50H	Petroleum, Water-glycol, Emulsion
Differential pressure indicator	CB-50H-V	Phosphoric ester
Differential pressure indication switch	CB-51H	Petroleum, Water-glycol, Emulsion
(N.C. and N.O. common)	CB-51H-V	Phosphoric ester
Blanking cap	AG-12H	Petroleum
(for differential pressure indication	AG-12H-W	Water-glycol, Emulsion
part)	AG-12H-V	Phosphoric ester
Bracket	B44P	_

How to Order

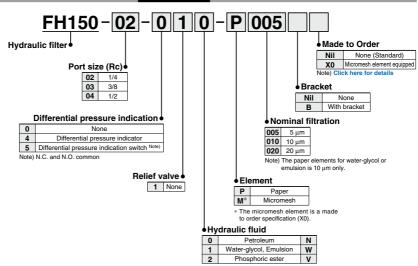

Replacement Flement Part No. (Including O-ring for element)

Note) N, W and V refer to the hydraulic fluid symbol indicated at the end of the element part number.

02 to 04 Phosphoric ester

FKM -70

Note) The material and nominal size notations are based on JISB2401.

(C65)


(P30)

inspirate ment and mental (mental mg of migres element)								
	Model	5 μm	10 μm	20 μm	Element size			
	FH150-02							
	FH150-03	EP910-005N	EP910-010N	EP910-020N	ø55 x 90			
	FH150-04							

Note 1) The symbol at the end of the element part no. indicates the hydraulic fluid type.


N: Petroleum, V: Phosphoric ester, W: Water-glycol, Emulsion (10 µm only)

Note 2) Refer to page 528 for micromesh elements. Note 3) Above elements require one element per filter

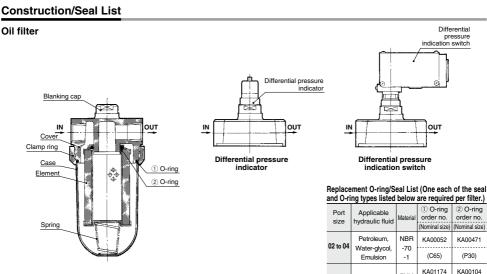

Flow Rate Characteristics

FH150-02 to 04

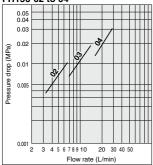

Conditions

Fluid:

Turbine oil Class 2 VG56 : 1 MPa 45 mm²/s


Measured pressure: 1 MPa Viscosity: 45 mm²/ Filter material: Paper Nominal filtration: 10 μm

Differential Pressure Indication

Two indication methods are available: differential pressure indicator and differential pressure indication switch. These can be mounted on all filter models.


■ Differential pressure indicator

- Operating pressure—0.13 MPa
- Once a value is displayed, it will continue to be displayed until reset, even if the pump is stopped. (Reset type)
- Perform element replacement when the red ring floats up and covers the entire view port.



■ Differential pressure indication switch

- Operating pressure—0.13 MPa
- When a value has been displayed, it will be automatically reset when the pump is stopped. (Non-reset type)
- This is a visual dual-purpose. Perform element replacement when the switch has actuated (when the red ring floats up and covers the entire view port).
- N.C. and N.O. common



 Refer to page 529 for "Microswitch for differential pressure indication switch".

Handling Precautions

1) Mounting

 Confirm IN and OUT before mounting. Then connect so that the case is oriented downward. For maintenance, make sure to provide sufficient space above the filter for removing the element.

2 Operation

- The hydraulic fluid used becomes high viscosity when the temperature is low during the winter, etc., and the differential pressure indicator or the switch may activate. If this occurs, wait until the oil temperature rises by a warm-up operation, then check if this is caused by clogging.
- Once the differential pressure indicator is actuated, the indication continues to be displayed until the indicator is reset (by depressing the reset button), even if the pump stops operating.
 - Reset after replacing the element and restarting operation, or after normal operation starts in cold weather such as during winter.
- When using a differential pressure indication switch and if a filter clogged signal is incorporated into the sequence circuit of the machine, make sure to design the system so the filter clogged signal does not operate until normal operation starts.



- When the pressure difference reaches 0.13 MPa during operation (actuating the differential pressure indicator), stop operation and replace the element.
- When replacing the element, drain the fluid from the case. Also, check the O-rings and replace them if they are damaged.

4) Other

 Refer to the operating manual regarding the tightening torque for clamping ring.

Use a commercially available hook wrench (applicable sizes 80 to 85 mm) for tightening and removing clamping rings.




HOW



FH150 Series

Dimensions

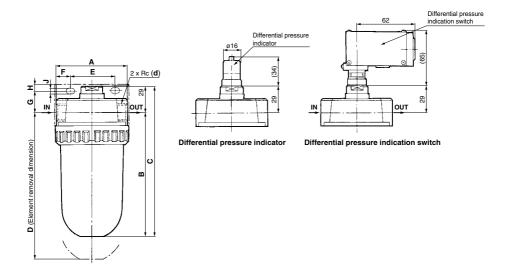

	(11111)										
Model	d	Α	В	С	D	Е	F	G	Н	J	Weight (kg)
FH150-02	1/4										
FH150-03	3/8	80	168.5	197.5	259.5	50	15	25	7	6.5	0.7
FH150-04	1/2										