

# Moisture Control Tube (Moiscon)

## Prevents condensation!

Prevents condensation in piping for small cylinders/air grippers.

Diffuses water vapor in the piping to the outside!



**Moisture control tube**

**General tube**

Existing piping

No condensation

Condensation generated

**Additional power supply and works are not necessary!**

**◀ All you have to do is install the moisture control tube!!**

Operating a small cylinder, air gripper, or air operated valve, etc. which has a small volume may cause condensation of water in the area near the actuator due to the volume ratio of the actuator volume and the operating piping volume.

The diagram compares two tube types. The top tube, labeled 'Moisture control tube', is shown with a red circle around its end and the text 'No condensation'. The bottom tube, labeled 'General tube', is shown with a blue circle around its end and a starburst labeled 'Condensation generated'. Both tubes are connected to 'Existing piping'. A red callout bubble on the right states 'Additional power supply and works are not necessary!'. A blue callout bubble below the tubes states 'All you have to do is install the moisture control tube!!'. A paragraph of text explains that operating a small cylinder or air gripper can cause condensation due to the volume ratio of the actuator and the piping.

**Series IDK**



CAT.ES30-12A

# Prevents problems with pneumatic equipment due to condensation.



Air quality affects the operation and the life of the equipment in a pneumatic system, so dehumidified air is necessary. In particular, if small actuators are continuously operated at high frequency, condensation may be generated even with dehumidified air, due to the characteristics of the system. "Moiscon" prevents condensation from being formed by diffusing water vapor generated in the piping to the outside before the water vapor is condensed.

## The mechanism of condensation in small actuators

**Supply**

**Exhaust**

- 1 The temperature in the piping rapidly drops due to adiabatic expansion.
- 2 If the temperature in the piping becomes lower than the dew point of the compressed air, vapor will be generated.
- 3 The vapor cannot be exhausted (cannot be pushed out) as the volume of the actuator is small.

Cylinder      Piping (Tube)      Solenoid Exhaust valve

**Supply**

Residual vapor is pressed by compressed air and accumulates in the area near the actuator.

Cylinder      Piping (Tube)      Solenoid Supply valve

The accumulated vapor is liquefied (condensed) due to repeated supply/exhaust.


Cylinder      Piping (Tube)      Solenoid Exhaust valve

**Water droplets**

**Condensed water**

**Grease deteriorates or is washed away.**

## Actuators where condensation is possible

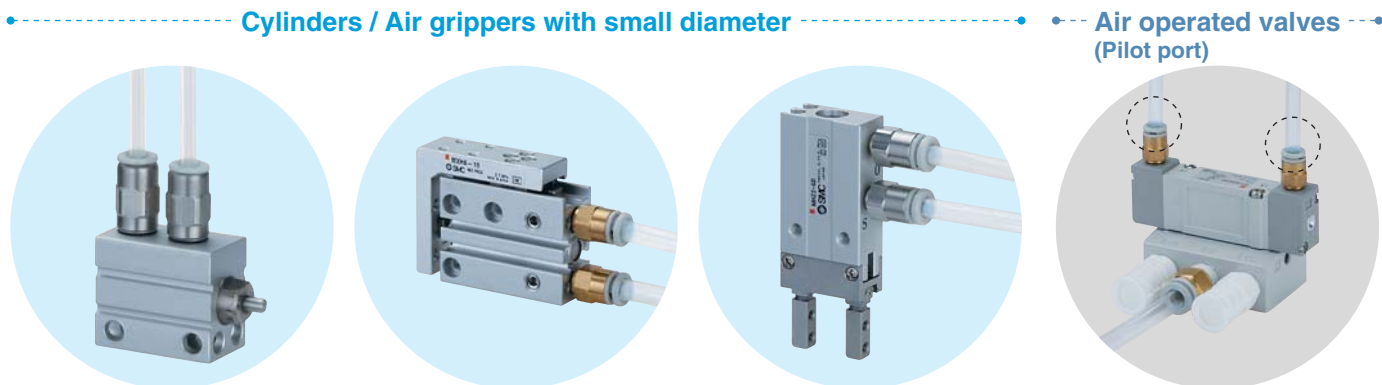

Features 1



# Moisture Control Tube Series *IDK*

## Specifications



Model	IDK02	IDK04	IDK06
Fluid	Compressed air		
Max. operating pressure	0.7 MPa		
Operating temperature (°C)	0 to 40 (No freezing)		
Operating environment *1	Indoors, where product is not exposed to water (0 to 40°C, Relative humidity 0 to 75%RH)		
Min. bending radius *2 (mm)	10	20	40
O.D. (mm)	2	4	6
I.D. (mm)	1.2	2.5	4
Quantity of moisture control tubes	2 pcs.		
Accessories	Inner sleeve 4 pcs. (already mounted into tube)		
Color	Transparent (Color will change to brown over time, but the functions are not affected.)		
Applicable fittings	KQ2, KJ		
Material	Fluoropolymer		


Note 1) Use the moisture control tube in a line with a refrigerated air dryer and a mist separator installed in the upstream compressed air line. The condensation prevention performance may be lowered depending on the quality of the supply compressed air (oil, dew point).

Note 2) The inner sleeve is already mounted and cannot be removed. If the inner sleeve comes off, re-insert the sleeve before mounting the fitting.

Note 3) Do not cut the tube.

\*1 Use the product in an operating environment where humidity is as low as possible.

\*2 The value at which the moisture control tube is bent or flattened at 20°C. Be careful not to bend or flatten the tube and the inner sleeve even if the value is more than the minimum bending radius.

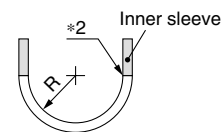

## How to Order

**IDK 02 - 100**


Moisture control tube O.D.

Symbol	O.D.
02	2 mm
04	4 mm
06	6 mm

Moisture control tube effective length

Symbol	Effective length
100	100 mm
200	200 mm

## Dimensions

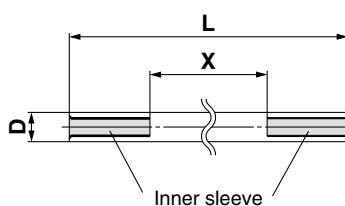

Unit: mm

Model	O.D. x I.D. D	Nominal effective length X	Full length L
IDK02-100	2 x 1.2	100	120
IDK02-200		200	220
IDK04-100	4 x 2.5	100	140
IDK04-200		200	240
IDK06-100	6 x 4	100	140
IDK06-200		200	240

Note) Dimensions at 40% relative humidity. Dimensions may change if the relative humidity changes.

## Made to Order

If you require the moisture control tube with an effective length not listed in the above table, please contact SMC.



# Moisture Control Tube Series *IDK*

## Table for Quick Selection 1

\* Refer to pages 4 and 5 for details of Model Selection.



### Basic conditions for selection

- Compressed air pressure: 0.5 MPa
- Compressed air dew point: -20°C (Atmospheric pressure dew point)
- Ambient air environment: Temperature 25°C, Humidity 40%
- \* If your operating conditions are different from these basic conditions, correct them based on "Model Selection".

### Single Piston

Actuator size		Piping condition Tube length (m)	Recommended model					
Bore size (mm)	Stroke (mm)		Tube O.D. 2 mm		Tube O.D. 4 mm		Tube O.D. 6 mm	
			IDK02-100	IDK02-200	IDK04-100	IDK04-200	IDK06-100	IDK06-200
2.5	All strokes	5	●	—	—	●	—	●
		10	●	—	—	●	—	●
4	All strokes	5	●	—	—	●	—	●
		10	●	—	—	●	—	●
6	Less than 10	5	●	—	—	●	—	●
		10	●	—	—	●	—	●
	10 or more	5	●	—	●	—	—	●
		10	●	—	—	●	—	●
8	Less than 10	5	●	—	●	—	—	●
		10	●	—	—	●	—	●
	10 or more	5	●	—	●	—	●	—
		10	●	—	●	—	—	●
10	Less than 10	5	●	—	●	—	●	—
		10	●	—	●	—	—	●
	10 or more	5	●	—	●	—	●	—
		10	●	—	●	—	●	—
16 (15)	Less than 10	5	●	—	●	—	●	—
		10	●	—	●	—	●	—
	10 or more	5	●	—	●	—	●	—
		10	●	—	●	—	●	—
20	Less than 10	5	●	—	●	—	●	—
		10	●	—	●	—	●	—
	10 or more	5	●	—	●	—	●	—
		10	●	—	●	—	●	—



### Dual Piston

Series	Actuator size		Piping condition Tube length (m)	Recommended model					
	Bore size (mm)	Stroke (mm)		Tube O.D. 2 mm		Tube O.D. 4 mm		Tube O.D. 6 mm	
				IDK02-100	IDK02-200	IDK04-100	IDK04-200	IDK06-100	IDK06-200
CXWM, CXWL (CXW□-25 or less)	10	25	5	—	—	—	—	—	—
			10	—	—	—	—	●	—
MXQ	6	10	5	●	—	●	—	●	—
			10	●	—	●	—	—	●
	Size larger than those above	5	●	—	●	—	●	—	
		10	●	—	●	—	●	—	
CXS, CXSJ	6	10	5	●	—	●	—	●	—
			10	●	—	●	—	—	●
	Size larger than those above	5	●	—	●	—	●	—	
		10	●	—	●	—	●	—	

Note) If the piping is longer than the above tube length, the IDK□-200 may be necessary.

# Moisture Control Tube Series *IDK*

## Table for Quick Selection 2

\* Refer to pages 4 and 5 for details of Model Selection.



### Basic conditions for selection

- Compressed air pressure: 0.5 MPa
- Compressed air dew point: -20°C (Atmospheric pressure dew point)
- Ambient air environment: Temperature 25°C, Humidity 40%
- \* If your operating conditions are different from these basic conditions, correct them based on "Model Selection".

### Air Gripper

Series	Bore size (mm)	Piping condition Tube length (m)	Recommended model					
			Tube O.D. 2 mm		Tube O.D. 4 mm		Tube O.D. 6 mm	
			IDK02-100	IDK02-200	IDK04-100	IDK04-200	IDK06-100	IDK06-200
MHZA2, MHZAJ2	6	5	●	—	●	—	—	●
		10	●	—	●	—	—	●
MHZ2, MHZJ2	6	5	●	—	●	—	●	—
		10	●	—	●	—	—	●
MHC2	6	5	●	—	●	—	—	●
		10	●	—	—	●	—	●
MHCA2	6	5	●	—	—	●	—	●
		10	●	—	—	●	—	●
MHCM2	7	5	●	—	—	●	—	●
		10	●	—	—	●	—	●
Air gripper with bore size larger than those above		—	●	—	●	—	●	—



### Rotary Actuator

Series	Vane type	Size	Rotating angle	Piping condition Tube length (m)	Recommended model						
					Tube O.D. 2 mm		Tube O.D. 4 mm		Tube O.D. 6 mm		
					IDK02-100	IDK02-200	IDK04-100	IDK04-200	IDK06-100	IDK06-200	
CRB□ CRBU2	Single	10	90	5	—	—	●	—	●	—	
				10	—	—	●	—	●	—	
			180	5	—	—	●	—	●	—	
				10	—	—	●	—	●	—	
			270	5	—	—	●	—	●	—	
				10	—	—	●	—	●	—	
	Double	10	90	5	—	—	●	—	●	—	
				10	—	—	●	—	●	—	
			100	5	—	—	●	—	●	—	
				10	—	—	●	—	●	—	
MSU□	Single	1	90	5	—	—	●	—	●	—	
				10	—	—	●	—	●	—	
			180	5	—	—	—	—	●	—	
				10	—	—	●	—	●	—	
			90	5	—	—	—	—	●	—	
				10	—	—	●	—	●	—	
	Double	3	90	5	—	—	●	—	●	—	
				10	—	—	●	—	●	—	
			1	90	5	—	—	●	—	●	—
					10	—	—	●	—	●	—
				90	5	—	—	—	—	●	—
					10	—	—	●	—	●	—
CRQ2	—	10	90	5	—	—	●	—	●	—	
				10	—	—	●	—	●	—	
			180	5	—	—	—	—	●	—	
				10	—	—	●	—	●	—	
			90	5	—	—	—	—	●	—	
				10	—	—	●	—	●	—	
MSQ□	—	1	90	5	—	—	●	—	●	—	
				10	—	—	●	—	●	—	
				2	5	—	—	—	—	●	—
					10	—	—	●	—	●	—
				3	5	—	—	—	—	●	—
					10	—	—	●	—	●	—

Note) If the piping is longer than the above tube length, the IDK□-200 may be necessary.


# Moisture Control Tube Series *IDK* Model Selection

## Selection Procedure

### 1 Check the presence of condensation.

(1) The presence of condensation can be verified by the dew point and Kv value (the volume ratio of tube and actuator) of the supply air.

**Fig. 1 Verification Chart of Condensation**

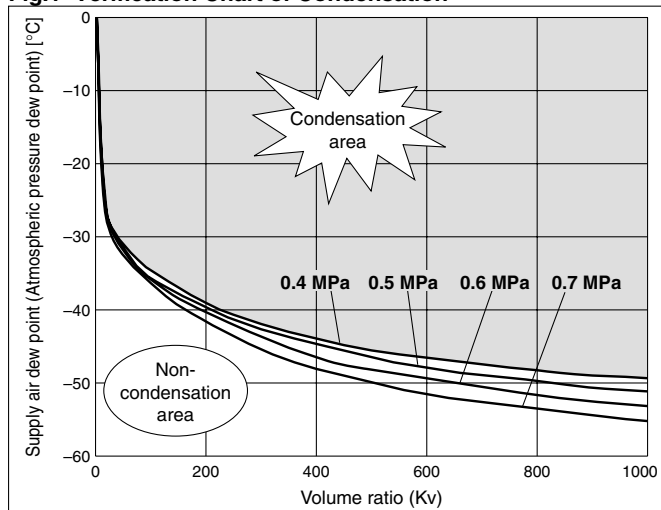

### Calculation method of volume ratio (Kv value)

Calculate the piping volume  $V_t$  and the actuator volume  $V_c$  and substitute them into equation ① below.

$$Kv = \frac{V_t}{V_c} \dots \textcircled{1}$$

$Kv$ : Volume ratio  
 $V_t$ : Piping volume ( $\text{mm}^3$ )  
 $V_c$ : Actuator volume ( $\text{mm}^3$ )

$$V_t = \frac{\pi d^2 l}{4}$$


$V_t$ : Piping volume ( $\text{mm}^3$ ) [can be selected from piping volume chart in Fig. 2.]  
 $d$ : Tube I.D. (mm)  
 $l$ : Tube piping length (mm)

\* Tube length means the length from the switch valve (e.g. solenoid valve) to the actuator.

$$V_c = \frac{\pi D^2 s}{4}$$

$V_c$ : Actuator volume ( $\text{mm}^3$ )  
 $D$ : Bore size (mm)  
 $s$ : Stroke (mm)


**Fig. 2 Piping Volume Chart**

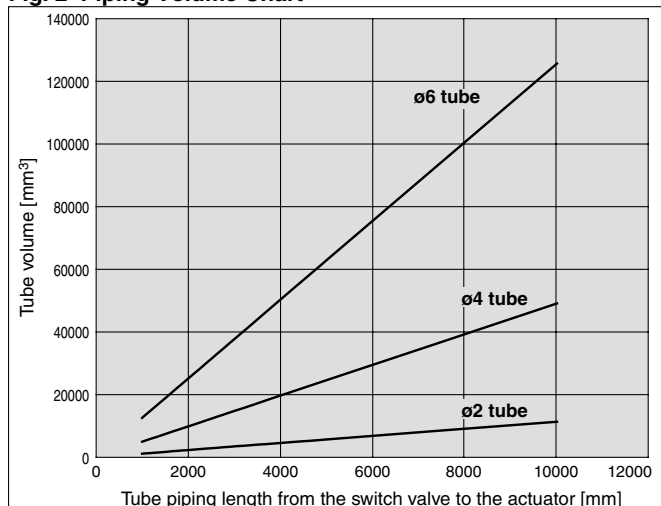

### 2 Select the length of moisture control tube for the condensation area.

(1) Find  $L$ , the necessary length corresponding to the  $Kv$  value, from the length selection chart at basic conditions.

**Fig. 3 Length Selection Chart at Basic Conditions**

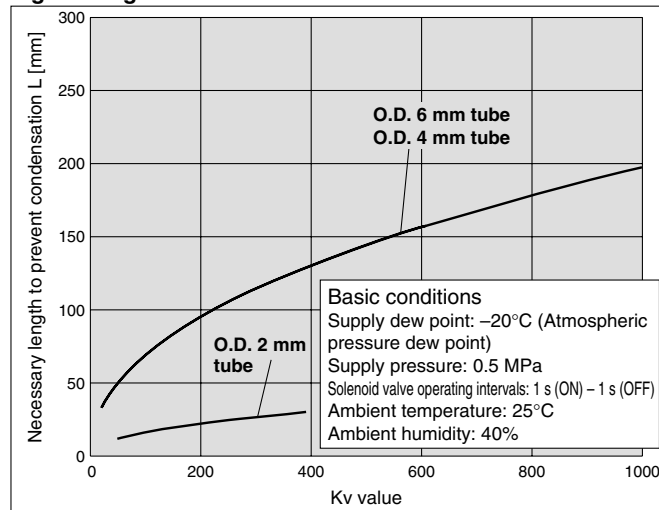

(2) If your operating conditions are different from these basic conditions, apply a correction factor.

**Necessary effective length = Basic condition length  $L$  x Correction factor  $C1$  x  $C2$  x  $C3$**

#### Correction Factor $C1$ for Supply Air Dew Point

Supply air dew point (°C)	Correction factor $C1$
-10	2
-20	1
-30	0.5
-40	0.25

#### Correction Factor $C2$ for Ambient Air Relative Humidity

Relative humidity	Temperature		
	10°C	25°C	40°C
20%	0.2	0.4	0.6
40%	0.5	1.0	1.3
60%	1.0	1.7	2.8
75%	2.1	4.0	5.9

#### Correction Factor $C3$ for Supply Pressure

Supply pressure (MPa)	Correction factor $C3$
0.3	0.4
0.4	0.7
0.5	1
0.6	1.25
0.7	1.6

## Selection Example

### Circuit conditions

- Actuator : CUJB4-6D
- Bore size **D**: 4 mm
- Stroke **s**: 6 mm
- Tube size : O.D. 6 mm x I.D. (d) 4 mm
- Tube piping length **l**: 5 m
- Supply air pressure : 0.3 MPa
- Supply air dew point : -20°C (Atmospheric pressure dew point)
- Ambient environment: Temperature 25°C, Humidity 60%

### 1 Check the presence of condensation.

#### Check the presence of condensation.

(1) Calculation method of volume ratio (Kv value)

$$V_t = \frac{\pi d^2 l}{4} = \frac{\pi \times 4^2 \times 5000}{4} = 62800 \text{ mm}^3$$

$$V_c = \frac{\pi D^2 s}{4} = \frac{\pi \times 4^2 \times 6}{4} = 75 \text{ mm}^3$$

$$K_v = \frac{V_t}{V_c} = 837$$

Note) For dual piston cylinder, the volume ratio will be 1/2 of the volume ratio calculated above.


#### Verify the presence of condensation.

(2) Refer to the verification chart of condensation.

Check whether the volume ratio (Kv) and the supply air dew point intersect in the condensation area.

With the conditions above, they intersect in the condensation area, meaning **condensation will occur**.


Fig.1 Verification Chart of Condensation

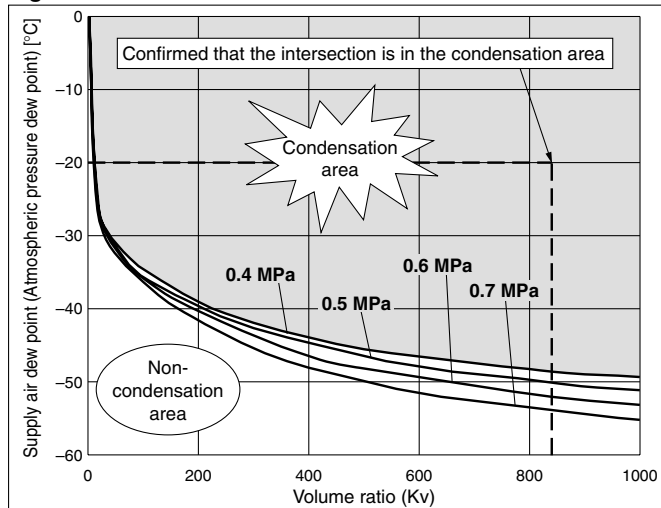

### 2 Select the length of moisture control tube.

(1) Find the necessary length L from the length selection chart at basic conditions and Kv value.

Fig. 2 Length Selection Chart at Basic Conditions

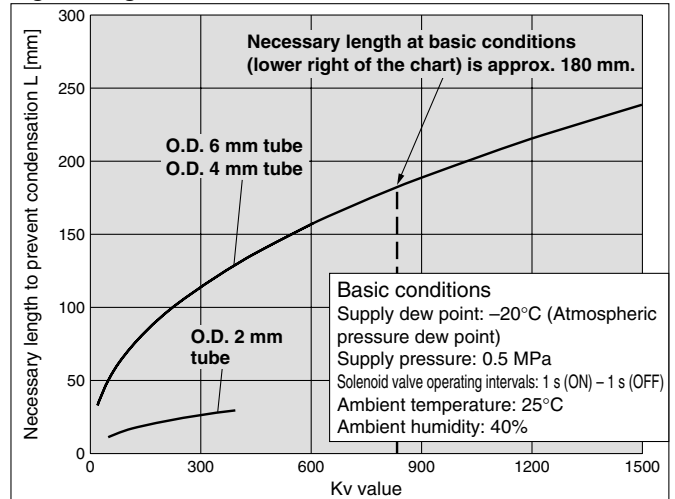

(2) If your operating conditions are different from these basic conditions, apply a correction factor.

**Necessary effective length = Basic condition length L x Correction factor C1 x C2 x C3**

In the example circuit, the conditions which are different from the basic conditions are:

Supply dew point: -20°C (Atmospheric pressure dew point) \* Basic conditions Supply dew point: -20°C (Atmospheric pressure dew point)  
Supply pressure: 0.3 MPa Supply pressure: 0.5 MPa  
Ambient environment: 25°C, 60% Ambient environment: 25°C, 40%

- (a) Find the correction factors.
- Supply air dew point correction factor **C1 = 1**
  - Ambient air dew point correction factor **C2 = 1.7**
  - Supply pressure correction factor **C3 = 0.4**
- (b) Find the necessary effective length after correction.



**Necessary effective length = 180 x 1 x 1.7 x 0.4 ≈ 120 mm**

Therefore, the moisture control tube **IDK06-200** with effective length 20 cm should be used.

#### Correction Factor C1 for Supply Air Dew Point

Supply air dew point (°C)	Correction factor C1
-10	2
-20	1
-30	0.5
-40	0.25

#### Correction Factor C2 for Ambient Air Relative Humidity


Relative humidity	Correction factor C2		
	10°C	25°C	40°C
20%	0.2	0.4	0.6
40%	0.5	1.0	1.3
60%	1.0	1.7	2.8
80%	2.1	4.0	5.9


#### Correction Factor C3 for Supply Pressure


Supply pressure (MPa)	Correction factor C3
0.3	0.4
0.4	0.7
0.5	1
0.6	1.25
0.7	1.6

## Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of “**Caution**,” “**Warning**” or “**Danger**.” They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC)\*1, and other safety regulations.

 **Caution:** **Caution** indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury.

 **Warning:** **Warning** indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.

 **Danger :** **Danger** indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.

\*1) ISO 4414: Pneumatic fluid power – General rules relating to systems.  
ISO 4413: Hydraulic fluid power – General rules relating to systems.  
IEC 60204-1: Safety of machinery – Electrical equipment of machines.  
(Part 1: General requirements)  
ISO 10218-1: Manipulating industrial robots - Safety.  
etc.

### Warning

**1. The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications.**

Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously review all specifications of the product referring to its latest catalog information, with a view to giving due consideration to any possibility of equipment failure when configuring the equipment.

**2. Only personnel with appropriate training should operate machinery and equipment.**

The product specified here may become unsafe if handled incorrectly. The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.

**3. Do not service or attempt to remove product and machinery/equipment until safety is confirmed.**

1. The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed.
2. When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.
3. Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.

**4. Contact SMC beforehand and take special consideration of safety measures if the product is to be used in any of the following conditions.**

1. Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.
2. Installation on equipment in conjunction with atomic energy, railways, air navigation, space, shipping, vehicles, military, medical treatment, combustion and recreation, or equipment in contact with food and beverages, emergency stop circuits, clutch and brake circuits in press applications, safety equipment or other applications unsuitable for the standard specifications described in the product catalog.
3. An application which could have negative effects on people, property, or animals requiring special safety analysis.
4. Use in an interlock circuit, which requires the provision of double interlock for possible failure by using a mechanical protective function, and periodical checks to confirm proper operation.

### Caution

**1. The product is provided for use in manufacturing industries.**

The product herein described is basically provided for peaceful use in manufacturing industries.

If considering using the product in other industries, consult SMC beforehand and exchange specifications or a contract if necessary.

If anything is unclear, contact your nearest sales branch.

## Limited warranty and Disclaimer/ Compliance Requirements

The product used is subject to the following “Limited warranty and Disclaimer” and “Compliance Requirements”.

Read and accept them before using the product.

### Limited warranty and Disclaimer

**1. The warranty period of the product is 1 year in service or 1.5 years after the product is delivered.\*2)**

Also, the product may have specified durability, running distance or replacement parts. Please consult your nearest sales branch.

**2. For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided.**

This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.

**3. Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalog for the particular products.**

**\*2) Vacuum pads are excluded from this 1 year warranty.**

A vacuum pad is a consumable part, so it is warranted for a year after it is delivered.

Also, even within the warranty period, the wear of a product due to the use of the vacuum pad or failure due to the deterioration of rubber material are not covered by the limited warranty.

### Compliance Requirements

**1. The use of SMC products with production equipment for the manufacture of weapons of mass destruction (WMD) or any other weapon is strictly prohibited.**

**2. The exports of SMC products or technology from one country to another are governed by the relevant security laws and regulations of the countries involved in the transaction. Prior to the shipment of a SMC product to another country, assure that all local rules governing that export are known and followed.**

## Safety Instructions

Be sure to read “Handling Precautions for SMC Products” (M-E03-3) before using.





## Series *IDK*

# Specific Product Precautions 1

Be sure to read this before handling.  
Refer to back page 1 for Safety Instructions.

### Design


#### ⚠ Caution

1. Use the moisture control tube without lubrication.
2. Do not cover the moisture control tube or use in an enclosed space. Water vapor escapes outside of the moisture control tube. Covering the moisture control tube will reduce the performance and condensation cannot be prevented.
3. The moisture control tube is for indoor use. It cannot be used under water or where it is exposed to water.
4. The exterior dimensions will change depending on the relative humidity. If the moisture control tube is left for a long period of time in an environment which exceeds the operating range, the outer dimensions will increase and it will become difficult to insert and remove it from the one-touch fitting. If it is left in a dry state, the dimensions will return to the original dimensions, but the performance will not be affected.
5. The outer dimensions will increase during operation and it may become difficult to pull out. In order to remove the tube, wait for a while after the operation has stopped.
6. The color of the moisture control tube will turn to brown over time due to reaction with organic substances in the air. This does not affect the performance or strength.
7. Do not use the tube in atmosphere or compressed air containing solvent.
8. Do not wipe or clean the product with alcohol. The product should only be cleaned by air-blow.
9. The moisture control tube is assumed to be used for static piping. If the tube moves, for example in a flexible moving tube, it may become worn, elongated or torn due to tensile forces, or disconnected from the fitting. Ensure the tube is in a static condition at all times before using.

### Mounting

#### ⚠ Caution

1. Do not use the moisture control tubes bundled together. Otherwise, the performance may be decreased.
2. Connect the tube directly to the fitting of the actuator or the air operated valve. If the tube is connected to other places, condensation will not be prevented and vapor will be generated.

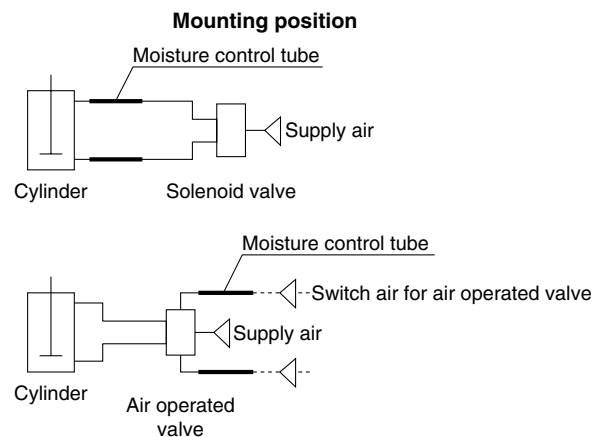

3. Insert the tube firmly into the one-touch fitting, and confirm that the fitting does not come off before use.
4. Store the moisture control tube without unpacking. After unpacking the product, store it at a temperature of 40°C or less and relative humidity of 75% or less.
5. Clean the tube and the actuator by air blowing to eliminate moisture before connecting them to the circuit with condensation.

#### ⚠ Caution

If the moisture control tube is mounted to an actuator where condensation has been generated, it is possible that the grease has been washed away. Add grease to the actuator based on the maintenance procedure of the actuator.

6. Mount the tube with minimum bending radius or more. Be careful not to bend or flatten the tube even if the bending radius is more than the minimum value. The moisture control tube is not suitable for the place where the product slides in high frequency.



## Series *IDK*

# Specific Product Precautions 2

Be sure to read this before handling.  
Refer to back page 1 for Safety Instructions.

### Operating Environment

#### ⚠ Caution

1. Avoid high temperature and humidity in the operating environment. They affect the performance of the tube and condensation may be generated.

### Installation

#### ⚠ Caution


1. Install a refrigerated air dryer and a mist separator in the compressed air line. The condensation prevention performance may be lowered depending on the quality of the supply compressed air (oil, dew point).

#### Recommended Model

Description	Model
Refrigerated air dryer	IDF/IDU
Mist separator	AM/AFM

2. Select the moisture control tube with the same diameter as the tube connected.

Example) TU0604 → IDK06-□00

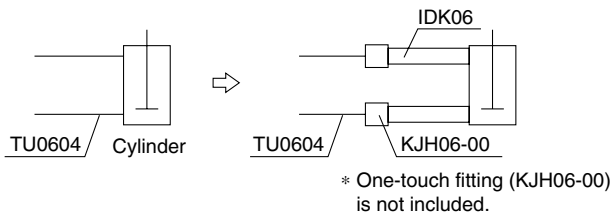

3. The inner sleeve is already mounted. It cannot be removed. If the inner sleeve comes off, re-insert the inner sleeve into the tube again before mounting it to the fitting.
4. Do not cut the moisture control tube.

### Others

#### ⚠ Caution

1. The moisture control tube is a product to prevent condensation of actuating parts such as small actuators and air operated valves. If you wish to use the product for any other application, please contact SMC.
2. Applicable fittings: One-touch fittings KQ2, KJ. Other types of fittings must not be used.



# Related Products

Dehumidification

## Refrigerated Air Dryer: Series IDF/IDU E



Series	Applicable compressor	Air flow capacity m <sup>3</sup> /min (ANR)
<b>IDF 1E to 75E</b>	0.75 to 75 kW	0.10 to 12.4
<b>IDU 3E to 75E</b>	2.2 to 75 kW	0.32 to 12.5

Dehumidification

## Membrane Air Dryer: Series IDG



Series	Outlet air flow $\ell$ /min (ANR)	Standard dew point (°C)
<b>IDG 1 to 100</b>	10 to 1000	-20
<b>IDG 3H to 100H</b>	25 to 1000	-15
<b>IDG 30L to 100L</b>	75 to 300	-40
<b>IDG 60S to 100S</b>	50 to 150	-60
Features	Non-freon, Power supply is not necessary.	

Removal of water droplets

## Water Separator: Series AMG



Series	Air flow capacity $\ell$ /min (ANR)	Port size
<b>AMG</b>	300 to 12000	1/8 to 2
Features	Removes water droplets from compressed air.	

Separation and filtration of particles

## Air Filter: Series AF



Series	Nominal filtration rating ( $\mu$ m)	Port size
<b>AF</b>	5	M5 x 0.8 1/8 to 1

Separation of oil mists

## Mist Separator: Series AM



Series	Nominal filtration rating ( $\mu$ m)	Rated flow $\ell$ /min (ANR)	Port size
<b>AM</b>	0.3 (Filtration efficiency 99.9%)	300 to 12000	1/8 to 2

## SMC Corporation

Akihabara UDX 15F,  
4-14-1, Sotokanda, Chiyoda-ku, Tokyo 101-0021, JAPAN  
Phone: 03-5207-8249 Fax: 03-5298-5362  
URL <http://www.smcworld.com>  
© 2009 SMC Corporation All Rights Reserved

Specifications are subject to change without prior notice and any obligation on the part of the manufacturer.

D-DN

1st printing NX printing NX 6000SZ Printed in Japan.