## Large Size 3 Port Solenoid Valve VP3145/3165/3185 Series

Rubber Seal

Note) CE-compliant: D/DL/DS/DZ only (Electrical entry)

CE-compliant

Q CE-compliant Note

D/DL/DS/DZ only

Note) Electrical entry:

Rc

G

NPT

NPTF

External pilot

SYJ VOZ

۷P

VG

VP3

Thread type

Nil

F

N Ŧ

Pilot option Nil Standard (Internal pilot)

## Large flow capacity, small exhaust resistance

(Refer to "Flow Rate Characteristic" table.)

## Easy conversion to N.C. or N.O.

Function plate makes it possible to use solenoid valve as a N.C. or N.O. valve with the port unchanged.

## Possible to use in vacuum or under low pressures


Vacuum: Up to 101.2 kPa Low pressure: 0 to 0.2 MPa


## Free mounting orientation



## Symbol

Internal pilot <Standard>

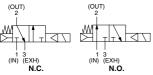

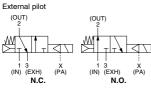

Note) N.O. valve operates properly only when appropriate pressure is applied to the pilot.

## Made to Order



VP series 3 port solenoids 1 Single

Nil

Body size 4 1/2 6 8

> Body type 5 Body ported

> > Port cizo


Valve option For general V For vacuum/low pressure

### Port size (IN, OUT port)

Symbol	Rc (Nominal size)	VP3145	VP3165	VP3185
03	3/8 (10A)	•		
04	1/2 (15A)	•		
06	3/4 (20A)	•	•	
10	1 (25A)		•	
12	1 1/4 (32A)		•	•
14	1 ½ (40A)			•
20	2 (504)			

Coil rated voltage •									
	Jon rates voltage v								
	1	100 VAC, 50/60 Hz							
	2	200 VAC, 50/60 Hz							
	3*	110 VAC, 50/60 Hz							
	4*	220 VAC, 50/60 Hz							
	5	24 VDC							
	6*	12 VDC							
	7*	240 VAC, 50/60 Hz							

Type of actuation A N.C. (Normally closed) B N.O. (Normally open)

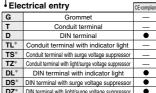

Semi-standard

G	Grommet	_					
Т	Conduit terminal	_					
D DIN terminal							
TL*	Conduit terminal with indicator light	_					
TS* Conduit terminal with surge voltage suppressor							
TZ* Conduit terminal with light/surge voltage suppressor							
DL*	DIN terminal with indicator light	•					
DS*	DIN terminal with surge voltage suppressor	•					
DZ*	DZ* DIN terminal with light/surge voltage suppressor						
Cami	atandard						

## Semi-standard For other rated voltages, please consult with SMC. How to Order Pilot Valve Assembly

## VT3113 - 00 | 1 | G

Coil rated voltage 100 VAC, 50/60 Hz 200 VAC, 50/60 Hz 110 VAC, 50/60 Hz 4\* 220 VAC, 50/60 Hz

	6*	12 VDC		DL*	DIN ter
	7*	240 VAC, 50/60 Hz		DS*	DIN termina
* Semi-standard				DZ*	DIN terminal
	For oth	er rated voltages, please consult with SMC.		* Semi	-standard

	Elect	rical entry	CE-compliant	П		
_	G	Grommet	_			
	T	Conduit terminal				
	D	DIN terminal	•	ļ	CE	-compliant
	TL*	Conduit terminal with indicator light	_	_	Nil	<u> </u>
	TS*	Conduit terminal with surge voltage suppressor			Q	CE-compliant Not
	TZ*	Conduit terminal with light/surge voltage suppressor		N	ote)	Electrical entry:
	DL*	DIN terminal with indicator light	•			D/DL/DS/DZ on
J	DS*	DIN terminal with surge voltage suppressor	•			
	DZ*	DIN terminal with light/surge voltage suppressor	•			
^						

(Refer to pages 1313 to 1315 for details.) Note) The pilot valve assembly shown above includes the function plate and gasket.



## VP3145/3165/3185 Series


## **External Pilot**

Use external pilot model in the following cases.

- Vacuum or low pressure (0.2 MPa or less): Vacuum/Low pressure type
- Using the valve with supply port external throttle:
   General type
- Air pressure of supply port is slow: General type
- Resistance in outlet side is small in case of air blowing or filling an air tank: General type

Note 1) Keep external pilot pressure within the pressure range below.

Note 2) Conversion of internal pilot and external pilot can not be done.

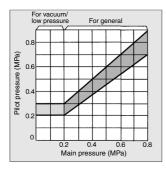

**Specifications** 

Specifications									
Fluid		Air							
Type of actuation			1	N.C.	or N.O.	(Conve	rtible)		
Bill-Add		Inter	nal pilo	ot		Exter	nal pil	ot	
Pilot type		For	genera	ıl	For vacuum/	low pressu	e Fo	or general	
Operating pressure range (MPa)	Main pressure				-101.2 kPa to 0.2		2 0	0.2 to 0.8	
Operating pressure range (wra)	Pilot pressure	0.2 to 0.8		0.2 to 0.3			Refer to graph left.		
Ambient and fluid temperature	(°C)	0 (No freezing) to 60							
Response time (ms) (1)		ON	ON AC 3		or less	OFF	AC	30 or less	
(at the pressure of 0.5 MPa)		ON	DC	40	or less	or less		30 or less	
Max. operating frequency (Hz)		3							
Lubrication (2)		Required (Equivalent to turbine oil Class1 ISO VG32)							
Manual override		Yes (Non-locking)							
Mounting orientation		Unrestricted							
Impact/Vibration resistance (m	/s²) (3)	150/50							

Note 1) Based on dynamic performance test, JIS B 8419: 2010. (Coil temperature: 20°C, at rated voltage, without surge voltage suppressor)

Note 2) This solenoid valve requires lubrication. Use turbine oil Class 1 (ISO VG32).

Note 3) Impact resistance:

No malfunction occurred when it is tested with a drop tester in the axial direction and at the right angles to the main valve and armature in both energized and de-energized states every once for each condition.

(Values at the initial period)

Vibration resistance: No malfunction occurred in a one-sweep test between 45 and 1000 Hz.

Test was performed at both energized and de-energized states in the axial direction and at the right angles to the main valve and armature. (Values at the initial period)

**Solenoid Specifications** 

	Standard		Grommet (G), Conduit terminal (T) DIN terminal (D)		
Electrical entry		Option	Conduit terminal with indicator light (TL), Conduit terminal with surge voltage suppressor (TS), Conduit terminal with light/surge voltage suppressor (TZ), DIN terminal with indicator light (DL), DIN terminal with surge voltage suppressor (DS), DIN terminal with light/surge voltage suppressor (DZ)		
Coil rated voltage (V)	AC (50/60 Hz)		100, 200, 110 *, 220 *, 240 *		
Con rated voltage (v)	DC		12 *, 24		
Allowable voltage fluctuati	on		-15 to +10% of rated voltage		
A Note)		Inrush	73 VA (50 Hz), 58 VA (60 Hz)		
Apparent power Note)	AC	Holding	28 VA (50 Hz), 17 VA (60 Hz)		
Power consumption Note)	ote) DC		12 W		
+ Comi standard					

<sup>\*</sup> Semi-standard Note) At rated voltage

## Flow Rate Characteristics/Weight

ſ		Port	cizo	Flow rate characteristics						
Valve model		Port size		$1 \rightarrow 2 (IN \rightarrow OUT)$			$2 \rightarrow 3 \text{ (OUT} \rightarrow \text{EXH)}$			Weight * (kg)
	vaive model	1(IN), 2(OUT)	3(EXH)	C [dm <sup>3</sup> /(s·bar)]	b	Cv	C [dm <sup>3</sup> /(s·bar)]	b	Cv	Grommet
		3/8		19	0.43	5.5	18	0.47	5.4	
-	VP3145	1/2	3/4	23	0.32	6.2	21	0.39	5.8	1.5
Į		3/4		28	0.36	7.6	26	0.35	7.0	

Valve model	Port s	size	Effective a	Weight * (kg)		
	1 (IN), 2 (OUT)	3(EXH)	$1 \rightarrow 2 (IN \rightarrow OUT)$	$2 \rightarrow 3 \text{ (OUT} \rightarrow \text{EXH)}$	Grommet	
	3/4		230	280		
VP3165	1	11/4	280	310	2.0	
	11/4		310	330		
	11/4		570	650		
VP3185	11/2	2	650	670	2.8	
	2		650	670		


<sup>\*</sup> For grommet Conduit terminal··· +0.2 kg

## Large Size 3 Port Solenoid Valve VP3145/3165/3185 Series

## Construction/Internal Pilot

As in the figure below, this pilot-operated solenoid valve consists of a compact 3 port solenoid valve as the pilot valve and a large 3 port valve as the main valve.

The pilot valve controls opening and closing the main valve. N.C. or N.O. function conversion can be done by switching the pilot passage.

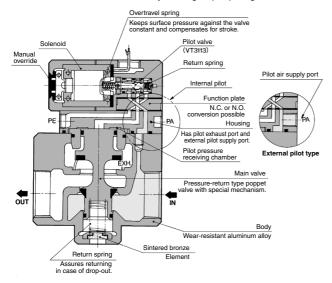

Note) Pilot valve and body are shown in a different direction from the actual product in order to show the construction and air passage.

### Piping (Vacuum Use)

1. Piping in general:

EXH port = Slower Slower Slower OUT port = Tank/ Vacuum pad Plug (2 port valve)

IN port = Air releasing

 Following the above piping, vacuum passage is switched between OUT and EXH, therefore, N.C./N.O. indication on the function plate and switching of the vacuum passage are reversed; N.C. (Normally closed) in vacuum passage are reversed:

Air pressure-in


"N.C." indicated on the plate → N.O. in vacuum passage (Normally open)

"N.O." indicated on the plate → N.C. in vacuum passage (Normally closed)

### N.C./N.O. Conversion

To convert valve operation from N.C. to N.O. or N.O. to N.C., remove the pilot valve, move the function plate along the gasket, both top and bottom until the mark ▶ meets N.C. (N.O.)

Please note however, that the N.O. valve functions properly only when the appropriate pressure is applied to the valve.

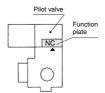

SYJ

VQZ VP

VG

VP3

## VP3145 Series


## **Dimensions: VP3145**


36

Grommet: VP3145□-□□G♣□ 30 101 G1/2 (PA port) Lead wire length 200 mm Manual override [External pilot specification] 1/4 (PE port) (EXH port) 2 x ø8.5 38.3 83 EXH 55 22 ОUТ 8 32

Note) External pilot port (PA port) 1/4 is processed for threads in external pilot model only.

2 x 3/8, 1/2, 3/4 (IN, OUT port)

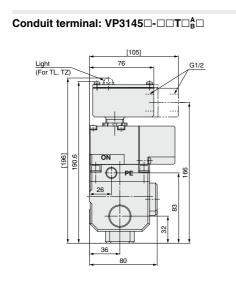


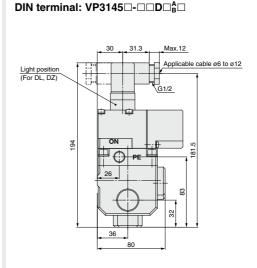

[]: With indicator light (TL, TZ)

## **Dimensions: VP3165**



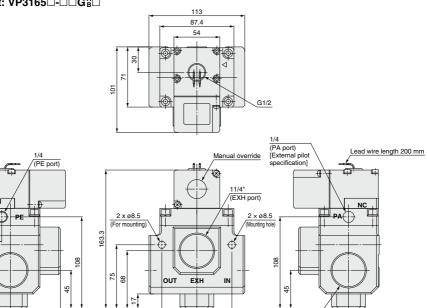


82.6

Note) External pilot port (PA port) 1/4 is processed for threads in external pilot model only.

Conduit terminal: VP3165□-□□T□å□

36


95

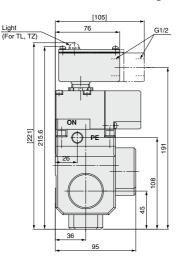

[]: With indicator light (TL, TZ)

## DIN terminal: VP3165□-□□D□A□

2 x 3/4, 1, 1 1/4 (IN, OUT port)

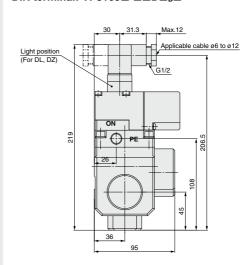

VP VG


SYJ

VQZ


VG VP3

## VP3185 Series


## **Dimensions: VP3185**

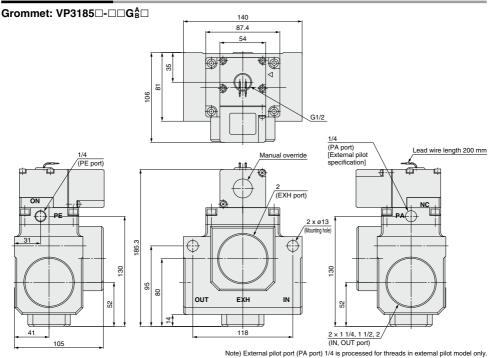

# Conduit terminal: VP3185 -- T - B - [110] Light 81 G1/2

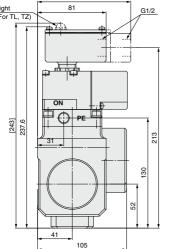

## DIN terminal: VP3185□-□□D□-

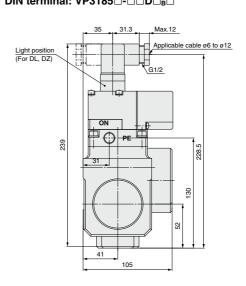

[]: With indicator light (TL, TZ)


1312


## **VP3145/3165/3185** Series Made to Order

Note) CE-compliant: D/DO only (Electrical entry)




Please contact SMC for detailed dimensions, specifications and lead times.

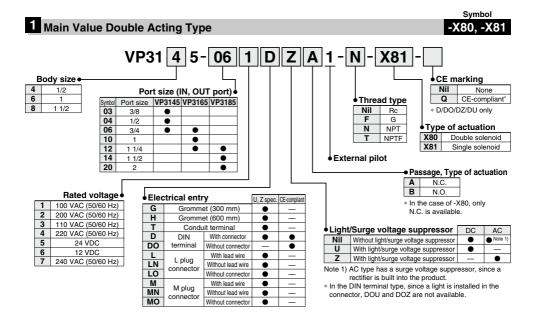


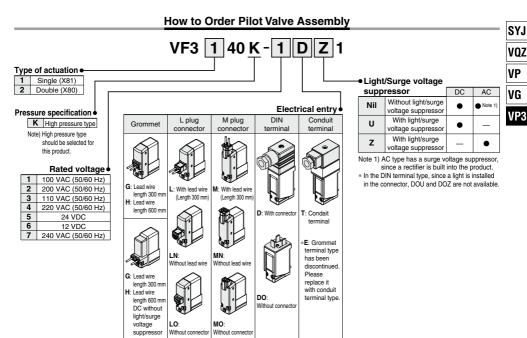

## VP3145/3165/3185 Series

#### Symbol -X80

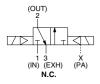

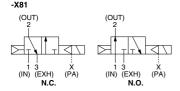

**Specifications** 

opoomounomo	
Valve configuration	External pilot 3 port solenoid valve
Type of actuation	Double solenoid (-X80), Single solenoid (-X81)
Fluid	Air
Operating pressure range	-101.2 kPa to 0.8 MPa
Pilot pressure	85 to 115% of main pressure, Min. 0.2 MPa
Ambient and fluid temperature	0 to 50°C (No freezing)
Lubrication Note 1)	Required (Equivalent to turbine oil Class 1 ISO VG32)
Mounting orientation	Unrestricted
Impact/Vibration resistance Note 2)	150/50 m/s <sup>2</sup>

Note 1) This solenoid valve requires lubrication. Use turbine oil Class 1 (ISO VG32).

Note 2) Impact resistance: No malfunction occurred when it is tested with a drop tester in the axial direction and at the right angles to the main valve and armature in both energized and de-energized states every once for each condition. (Values at the initial period)

Vibration resistance: No malfunction occurred in a one-sweep test between 45 and 1000 Hz. Test was performed at both energized and de-energized states in the axial direction and at the right angles to the main valve and armature. (Values at the initial period)

## **Solenoid Specifications**

Electrical entry	Grommet, Conduit terminal, DIN terminal L plug connector, M plug connector			
Coil rated voltage (V)	AC (50/60 Hz)		100, 200, 110, 220, 240	
Con rated voltage (v)	DC		24, 12	
Allowable voltage fluctuation		±10% of rated voltage		
Apparent power (VA) Note)	AC*	1.55 (With indicator light: 1.65)		
Apparent power (VA)	AC"	DIN/Conduit terminal with indicator light: 1.7		
Power consumption (W) Note)		Without indicator light	1.5	
rower consumption (w)		With indicator light	1.55, DIN/Conduit terminal with indicator light: 1.75	


<sup>\*</sup> A rectifying circuit is used in the AC type. Note) At rated voltage


## **△** Caution

Piping and other usage are the same as standard products.

## Dimensions

## VP3145-□□DZA1-X81

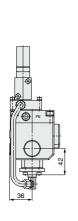

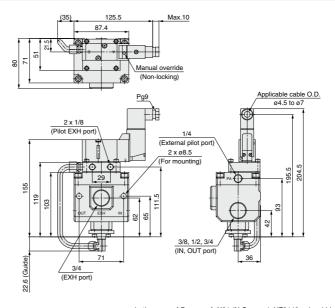

- In the case of B spec. of -X81 (N.O. spec.), VF3140 solenoid has to be
- positioned at left, when looking at the EXH port in the front face.


   In the case of -X80, VF3240K-□□□1 (Pilot valve) will be mounted.






## Large Size 3 Port Solenoid Valve VP3145/3165/3185 Series

## **Dimensions**

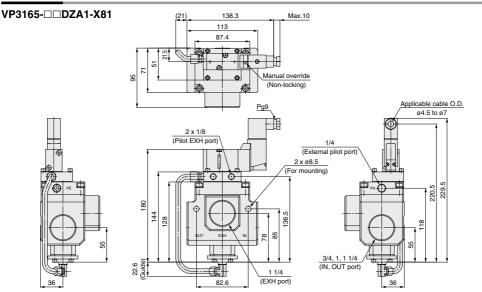

- In the case of B spec. of -X81 (N.O. spec.), VF3140 solenoid has to be positioned at left, when looking at the EXH port in the front face.
- In the case of -X80, VF3240K-□□□1 (Pilot valve) will be mounted.

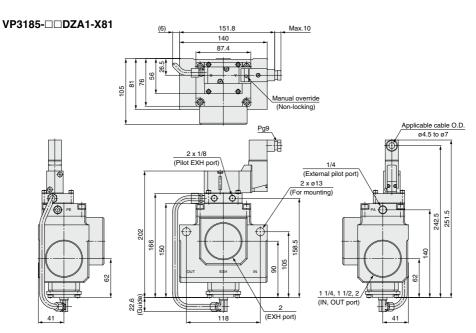

- In the case of B spec. of -X81 (N.O. spec.), VF3140 solenoid has to be positioned at left, when looking at the EXH port in the front face.
- In the case of -X80, VF3240K-□□□1 (Pilot valve) will be mounted.



SYJ

VQZ

۷P

VG

VP3



## VP3145/3165/3185 Series Specific Product Precautions

Be sure to read this before handling the products.

Refer to back page 50 for Safety Instructions and pages 3 to 9 for 3/4/5 Port Solenoid Valve Precautions.

## 

### **Piping**

If supply port air pressure drops to less than 0.2 MPa, the valve may malfunction. In such a case, use external pilot type. (When throttling IN port, or operating with OUT port open to the atmosphere or in a similar operation.)

## Pressure balance among each port

This solenoid valve is pressure-unbalanced type. Operate it within this pressure range:  $IN \geq OUT \geq EXH$ . If not operated in the range, the valve will malfunction.

### Use as 2 port valve

- Plug EXH port in case of pressure-in and plug IN port in case of vacuum use
- This valve has slight air leakage and can not be used for such purposes as holding air pressure (including vacuum) in the pressure container.

#### Supply air

Install an air filter and a lubricator on the upstream side.

#### Lubrication

This solenoid valve requires lubrication. Use turbine oil Class 1 (ISO VG32).

#### Environment

If using the valve in a dusty environment, install a silencer at EXH port and PE port to prevent dust from entering.

#### N.C./N.O. conversion

When changing the direction of a function plate to convert from N.C. to N.O. and vice versa, note that the equipment to be connected will act reversely.

### How to Calculate the Flow Rate

For obtaining the flow rate, refer to front matter

## Light/Surge Voltage Suppressor

	Grommet (G)	Conduit terminal (T)	DIN tern	ninal (D)
With indicator light (L)	None	Neon bulb & TOO	LED LED	Neon bulb
Surge voltage suppressor (S)		Varistor	- B - B - B - B - B - B - B - B - B - B	
With light/surge voltage suppressor (Z)	None	Varistor Neon bulb	° LED	OO VAC or more Neon bulb

"Items that are marked "With indicator light," "With surge voltage suppressors," and "With light/surge voltage suppressor" are all non-polar types.

## How to Use DIN Terminal

#### 1. Disassembly

- 1) After loosening the screw ①, then if the housing ④ is pulled in the direction of the screw, the connector will be removed from the body of equipment (solenoid, etc.).
- 2) Pull out the screw ①, then remove the gasket ② or ②.
- 3) On the bottom part of the terminal block ③, there's a cut-off part (indication of an arrow) ⑥. If a small flat head screwdriver is inserted between the opening in the bottom, terminal block ③ will be removed from the cover ④. (Refer to the figure below.)
- 4) Remove the cable gland ⑤ and plain washer ⑥ and rubber seal ⑦.

## 2. Wiring

- 1) Pass them through the cable ® in the order of cable ground ⑤, washer ⑥, rubber seal ⑦, and then insert into the housing ④.
- 2) Dimensions of the cable (8) are the figure as below. Skin the cable and crimp the crimped terminal (9) to the edges.
- 3) Remove the screw with washer ⊗ from the bracket ⊗ (Loosen in the case of Y-shape type terminal.) As shown in the below figure, mount a crimped terminal ⑨, and then again tighten the screw ⊚.

Note) Tighten within the tightening torque of 0.5 N·m  $\pm 15\%.$ 

- Note: a It is possible to wire even in the state of bare wire. In that case, loosen the screw with washer and place a lead wire and into the bracket, and then tighten it once again.
  - b Maximum size of crimped terminal ③
    is up to 1.25 mm² —3.5 when O
    terminal. For Y terminal, it is up to
    1.25 mm² —4.
    c Cable ③ outside diameter: ø6 to ø12 mm

Note) For the one with the outside diameter ranged between ø9 to ø12 mm, remove the inside parts of the rubber seal ⑦ before using.

### 3. Assembly

- Terminal block 3 connected with housing 4 should be reinstated.
   (Push it down until you hear the click sound.)
- Putting rubber seal ⑦, plain washer ⑥, in this order into the cable introducing slit on the housing ④, then further tighten the cable gland ⑥ securely.
- 3) By inserting gasket ② or ③ between the bottom part of the terminal block ③ and a plug on an equipment, screw in ① on top of the housing ④ and tighten it.
- Note) Tighten within the tightening torque of 0.5 N·m ±20%

#### Changing the entry direction

The cable entry direction of a connector can be changed as desired (4 directions at  $90^{\circ}$  intervals), depending on the combination of a housing  $\widehat{4}$  and a terminal block  $\widehat{3}$ .

